



User's Manual

Line Scan Camera

Type : SU2020/SU2025



NIPPON ELECTRO-SENSORY DEVICES CORPORATION

For Customers in U.S.A.

This equipment has been tested and found to comply with the limits for a Class A digital device, in accordance with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense.

For Customers in the EU

This equipment has been tested and found to comply with the essential requirements of the EMC Directive 2004/108/EC, based on the following specifications applied:

EU Harmonised Standards

EN55022:2010 Class A

EN61000-6-2:2005

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Directive on Waste Electrical and Electronic Equipment (WEEE)

Please return all End of Life NED products to the distributor from whom the product was purchased for adequate recycling and / or disposal. All costs of returning the Product to NED are borne by the shipper.

Introduction

Thank you for purchasing NED's Line Scan Camera. We look forward to your continued custom in the future.

For safety use

- ◆ For your protection, please read these safety instructions completely before operating the product and keep this manual for future reference.
- ◆ The following symbols appear next to important information regarding safe product handling.

 Warning	If the product is not handled properly, this may result in serious injury or possible death.
 Caution	If the product is not handled properly, this may result in physical injury or cause property damage.

Safety precaution

Warning

- ◆ Never disassemble or modify this product, unless otherwise specified to do so in this manual.
- ◆ When hands are wet, avoid handling this product and do not touch any of the connection cable pins or other metallic components.
- ◆ Do not operate this product in an environment that is exposed to rain or other severe external elements, hazardous gases or chemicals.
- ◆ If the product is not to be used for an extended period of time, as a safety precaution, always unplug the connection cable from the camera unit.
- ◆ If the product installation or inspection must be executed in an overhead location, please take the necessary measures to prevent the camera unit and its components from accidentally falling to the ground.
- ◆ If smoke, an abnormal odor or strange noise is emitted from the camera unit, first turn OFF power, then unplug the cable from the camera unit.
- ◆ This product is not intended for use in a system configuration built for critical applications.

Instructions before use

- ◆ Only operate this product within the recommended environmental temperature range.
- ◆ Use only the specified power source and voltage rating.
- ◆ Do not drop this product. Avoid exposure to strong impact and vibrations.
- ◆ Install the camera unit in a well-ventilated environment, in order to prevent the camera from overheating.
- ◆ If the camera must be installed in an environment containing dust or other particles, take required measures to protect the camera unit from dust adhesion.
- ◆ Do not unplug the cable while power is being supplied to the camera unit. To prevent product damage, always shut down the power supply before unplugging the power cable.
- ◆ When the surface of the camera window becomes dirty due to dust or grime, black smudges appear in the displayed image. Use an air blower to remove the dust particles. Dip a cotton swab into ethanol alcohol and clean the camera window. Be careful not to scratch the glass.
- ◆ Use of non-infrared lighting such as a daylight fluorescent lamp is recommended. If halogen lighting is employed, always install an infrared filter into your system configuration.
- ◆ Please note that exposure to long wavelength light outside of the sensors visible optical range can affect the image.
- ◆ Sensitivity may fluctuate depending on the spectral response level of the light source. In cases like this, changing the light source to one with a different spectral response level may reduce this problem.
- ◆ Please note that when the CCD is exposed to excessive quantities of light, blooming can occur. (this product does not have an Anti-Blooming function)
- ◆ For stabilized image capturing, turn ON the power supply and execute aging for ten to twenty minutes before actually using the camera unit.
- ◆ Do not share the power supply with motor units or other devices that generate noise interference.
- ◆ Do not disconnect the camera while rewriting the embedded memory.
- ◆ When you change the exposure mode that is set at the NED factory, input control signal (CC1) from the capture board.

Product Warranty

Warranty Period

- ◆ The product warranty period, as a general rule, is two years from purchase; however for detailed conditions please contact the sales representative for your region/country.
- ◆ However, in some cases due to the usage environment, usage conditions and/or frequency of use, this warranty period may not be applicable.

Warranty Scope

- ◆ Product repair will be performed on a Return To Manufacturer basis. On-site maintenance will incur additional charges.
- ◆ If defects in material or workmanship occur during the warranty period, the faulty part will be replaced or repaired by us free of charge. Return shipping charges must be paid by the sender. However, the following cases fall outside of the scope of this warranty:

Exclusions from Warranty Coverage

- ◆ We will under no circumstances assume responsibility for the following cases: damage caused by fire, earthquake, other acts of a third party, other accidents, negligent or intentional misuse by the user, or other usage under extraordinary circumstances.
- ◆ Damages (e.g. loss of business profits, business interruption, etc.) resulting from use or non-use.
- ◆ Damages caused by use other than as described in this document.
- ◆ Damages resulting from malfunction due to a connected device.
- ◆ Damages resulting from repairs or modifications performed by the customer.

Fault Diagnosis

- ◆ As a general rule, in the first instance fault diagnosis should take the form of a telephone call or an email to enable us to assess the circumstances of the malfunction.
- ◆ However, depending on the customer's requests, we, or our agent, may require an additional fee for this service.

Exclusion of Liability for Compensation for Missed Opportunities

- ◆ Regardless of whether within the warranty period or not, our warranty does not cover compensation for missed opportunities for our customers, or our customers' customers, caused by a fault of our products, nor for damage to products other than our own, or related business.

Note about Product Usage

- ◆ This product has been designed and manufactured as a general-purpose product for general industry. In applications expected to be life-critical or safety-critical, the installer or user is requested to install double or triple failsafe systems.

Repair Service Outline

- ◆ The cost of dispatching engineers etc. for repair service is not included in the price of purchased and supplied goods. On request, arrangements can be made separately.

Scope of Repair Service

- ◆ The above assumes business dealings and usage to take place in the customer's region / country. In cases of business dealings and/or usage outside the customer's region/country, separate consultation is required.

Table of Contents

1 Product Outline	10
1.1 Features	10
1.2 Applications.....	10
1.3 Image Sensor.....	12
1.4 Performance Specifications.....	12
2 Camera Setting and Optical Interface	14
2.1 Setting Camera.....	14
2.2 Fixing Camera.....	14
2.3 Camera dimension	15
2.4 Optical Interface	16
3 Hardware	17
3.1 Camera Connection	17
3.2 Input / Output Connectors and Indicator.....	18
3.3 Connectors • Pin Assignments • Cables	19
3.4 Power Supply.....	22
4 Camera Control	23
4.1 Flow of Camera Control.....	23
4.1.1 Command Overview.....	23
4.1.2 Command Format (PC to Camera Transmission).....	23
4.1.3 Reply Format (Camera to PC Transmission).....	24
4.1.4 Camera Control Commands.....	25
4.1.5 Memory Setup Values (Factory Settings)	25
4.2 Details on Commands	26
4.2.1 Setting Gain	26
4.2.2 Setting CDS Gain.....	26
4.2.3 Setting Offset	26
4.2.4 Switching video output.....	27
4.2.5 Switching trigger mode	27
4.2.6 Memory Save	27
4.2.7 Memory Load	27
4.2.8 Memory Initializing (Initializing Camera Settings)	28
4.3 Startup	28
4.4 Saving and Loading Camera Settings	28

4.5 Serial Communication Settings.....	29
4.6 Video Output Format	30
4.7 Exposure Mode and Timing Chart.....	31
4.7.1 Free Run Mode.....	31
4.7.2 External Trigger (ExTrg) Exposure Mode	32
4.8 Setting Offset.....	32
4.9 Setting Gain	33
5 Confirming Camera Settings	34
5.1 Before Power-on	34
5.2 After Power-on.....	35
5.3 During Operation.....	37
6 Sensor Handling Instructions	38
6.1 Electrostatic Discharge and the Sensor	38
6.2 Protecting Against Dust, Oil and Scratches	38
6.3 Cleaning the Sensor Window	38
7 Troubleshooting	39
7.1 No Image	39
7.2 Noise on Image.....	41
7.3 Camera becomes hot.....	43
8 NCCtrl	44
8.1 Overview	44
8.2 System Requirements	44
8.3 Install	45
8.4 Uninstall	45
8.5 Operation	45
8.5.1 General description.....	45
8.5.2 Starting NCCtrl.....	46
8.5.3 Open the control setting file.....	47
8.5.4 Selecting interface and Timeout setting	47
8.5.5 Connect	50
8.5.6 Disconnect and exit program.....	50
8.5.7 Check the contents of communication	51
8.5.8 Export Parameters to text file	51
8.5.9 Import Parameters from text file.....	52

8.6 Control	52
8.6.1 Gain and Offset	53
8.6.2 Clock, Video output, Video shift, Exposure mode	54
8.6.3 Exposure time	54
8.6.4 Binning	54
8.6.5 Camera Memory	54
8.6.6 Calibration	55
8.6.7 Level Correction	55
8.6.8 Test Pattern	55
8.6.9 Line Delay	56
8.7 Software Upgrades	56
8.7.1 NCCTRL upgrades	56
8.7.2 Adding/Replacing control setting file	56
8.7.3 Adding/Replacing the interface Plug-in	56
8.8 Data Transmission Programming	56
8.9 NCCTRL Troubleshooting	57
8.9.1 You can not change the exposure time with NCCTRL	57
8.10 Attention on use	57
9 Others	58
9.1 Notice	58
9.2 Contact for support	58
9.3 Product Support	59
Revision History	60

1 Product Outline

1.1 Features

- High speed readout (25MHz:SU2025,20MHz:SU2020)
- High resolution (2048 pixels)
- Single power source DC12~15V for operation
- Easy connection with a variety of frame grabber boards via Camera Link interface
- Easy control of gain / offset / video output (8-/10-bit) with external software.
- High responsivity and low noise
- Flat-field correction - minimizes lens vignetting, non-uniform lighting and sensor FPN and PRNU
- Low power consumption (20% decrease from NED old camera)

1.2 Applications

- Inspection of Transparent panels and PCBs
- Inspection of high speed moving objects
- Flat panel display inspection
- Inspection of glass and sheet-like objects
- Printed circuit board inspection
- This camera utilizes an Intelligent Transportation System
- Outdoor surveillance

An example of Visual Inspection of PCBs is shown below.

■ Example of using of one camera.
(Inspection of only surface)

■ Example of using of three cameras.
(Inspection of surface and roller end face)

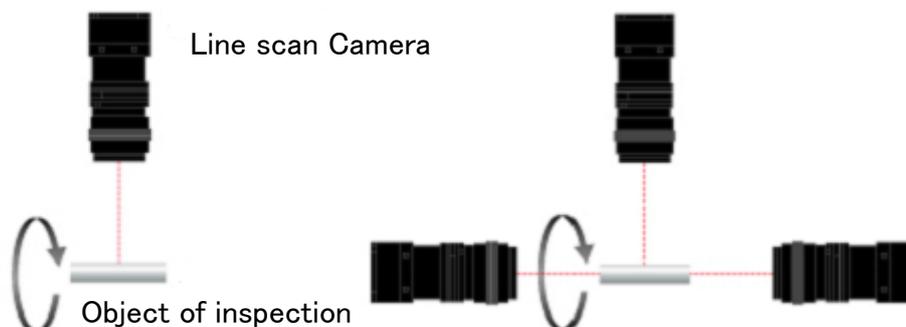


Figure 1-2-1 Visual Inspection of PCBs

Object of inspection (example)

Metallic part of cylinder and conical geometry (surface and roller end face)

- Automobile component
- Architectural reinforcement parts
- Various pin parts

Typical detection item

- chip
- dent
- scratch
- chip of roller end face
- external dimensions

Device specification

1. Camera: Line scan camera of number of 2048 pixels
2. Controller: Dedicated software for PC system

1.3 Image Sensor

The camera uses with a maximum data rate of 25MHz(SU2025)·20MHz(SU2020) to acquire high responsivity and superior quality images.

The pixel size is 14 μ m \times 14 μ m. SU2025 outputs 2048 pixel data through 25MHz, SU2020 outputs 2048 pixel data through 20MHz.

1.4 Performance Specifications


The Performance Specifications are shown below. Unless otherwise specified, the data shown is when the camera is operating at the maximum scan rate.

Table 1-4-1 Performance Specifications

Items		Specifications
Number of Pixels		2048
Pixel Size H x V (μ m)		14 x 14
Sensor Length (mm)		28.6
Spectral Responsivity (nm)		400~800 *Peak 567
DataRate (MHz)	SU2025	25 [Fixed]
	SU2020	20 [Fixed]
Scan Rate (μ s) / [kHz]	SU2025	88 / [11.4]
	SU2020	110 / [9.1]
Saturation Exposure (lx·s) (typically) *PGA Gain 0dB, Ta=25°C, Daylight Fluorescent Light		0.0555
Responsivity (V/ [lx·s]) (typically) *Analog 5V Conversion Sensitivity PGA Gain 0dB, Ta=25°C, Daylight Fluorescent Light		90
Gain Adjustable Range		0 ~ 21(MAX.30dB In using CDS) ※0.03125 dB/STEP
Offset Adjustable Range (DN)	8 bit/tap	0 ~ 19 ※1LSB/STEP
	10 bit/tap	0 ~ 76 ※4LSB/STEP
	12 bit/tap	0 ~ 304 ※16LSB/STEP
Video output Camera Link	Format	Camera Link Base line 8,10,12bit
	Protocol	Camera Link Base Configuration
PRNU (Photo Response Non Uniformity)		3%
Random Noise (DN)		20 (Minimum gain 10bit)

Control Input		CC1: External Synchronizing Signal [start signal]
Serial communication Control		SerTC、SerTFG
Master Clock (MHz) *only internal clock	SU2025	50
	SU2020	40
Connectors	Data/Controller	3M: MDR26 [Camera Link]
	Power Supply	Hirose: HR10A (4Pin)
Lens Mount		Nikon F Mount
Operating Temperature (°C) No Condensation		0 to 50
Power Supply Voltage (V)		DC 12~15 [+/-10%]
Consumption Current (mA) (typically)		270 [DC12V]
Size W x H x D (mm)		64x70x91.7 (*see section 4)
Mass (g) (Camera only)		< 410
Special instruction		Camera Link Interface

The spectral Responsivity is shown below.

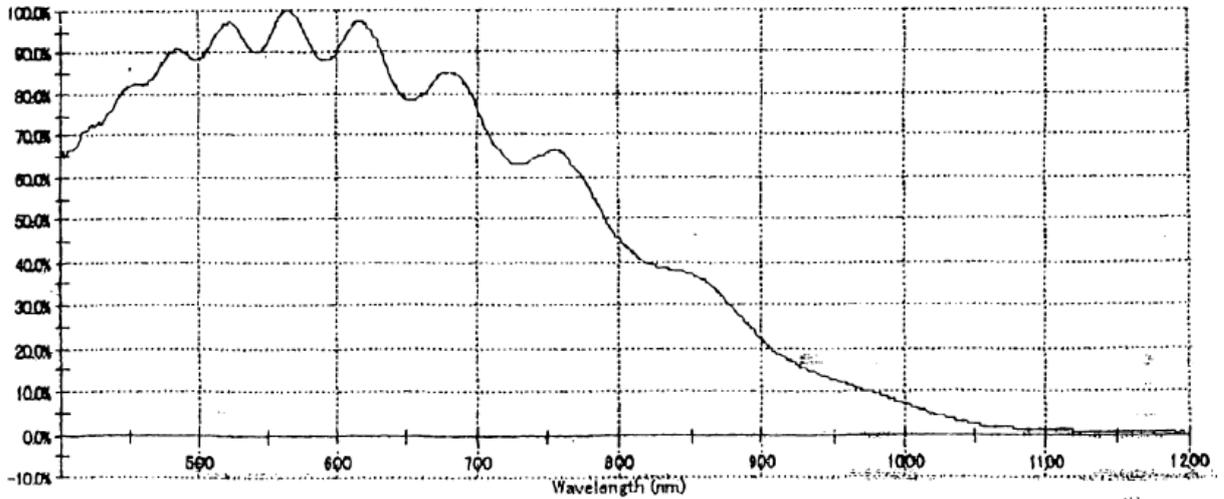

2 Camera Setting and Optical Interface

2.1 Setting Camera

Use the M4 screw holes or the screw hole for a tripod to set the camera.

2.2 Fixing Camera

- Use the M4 screw holes (4 places at the front, 8 places at the side) to fix the camera.
- Or use the 1/4"-20UNC screw hole (the screw hole for a tripod, 1 place at the side) to fix the camera.
- ◆ If using the front panel M4 mounting holes, the screw length for fixing the camera should be less than 6mm.
- ◆ No X-, Y-axis orientation and tilt adjustment mechanism is available. Please provide an adjustment mechanism yourself as necessary.

2.4 Optical Interface

The amount and wavelengths of light required to capture useful images depend on the intended use. Factors include the property, speed, the object's spectral characteristics, exposure time, the light source characteristics, the specifications of the acquisition system and so on.

The exposure amount (exposure time x light amount) is the most important factor in getting desirable images. Please determine the exposure amount after studying what is most important to your system.

Keep these guidelines in mind when setting up your light source:

- LED light sources are relatively inexpensive, provide a uniform field and longer life span compared to other light sources. However, they also require a camera with excellent sensitivity.
- Halogen light sources generally provide very little blue relative to infrared light (IR).
- Fiber-optic light distribution systems generally transmit very little blue light relative to IR.
- Metal halide light sources are very bright but have a shorter life span compared to other light sources.

Generally speaking, the brighter light sources, the shorter life span.

CCD image sensors are sensitive to infrared (IR). We recommend using daylight color fluorescent lamps that have low IR emissions. If you use a halogen light source, to prevent infrared from distorting the images use an IR cutoff filter that does not transmit IR wavelengths.

3 Hardware

3.1 Camera Connection

- (1) Camera Link cables shall be used to connect the camera unit with the frame grabber board.
 - ◆ If you use asymmetric Camera Link cables, connect the camera with the connector labeled as "Camera side".

- (2) Connect with a power supply.

Use a power cable to connect the camera with the power source for the camera. Insert the plug end of the cable into the camera. Attach the opposite end (loose wires) to the power unit.

 - ◆ Other than the above, a personal computer, a frame grabber board, a photographic lens, a photographic lens mount, a light source and an encoder are necessary, depending on the situation.

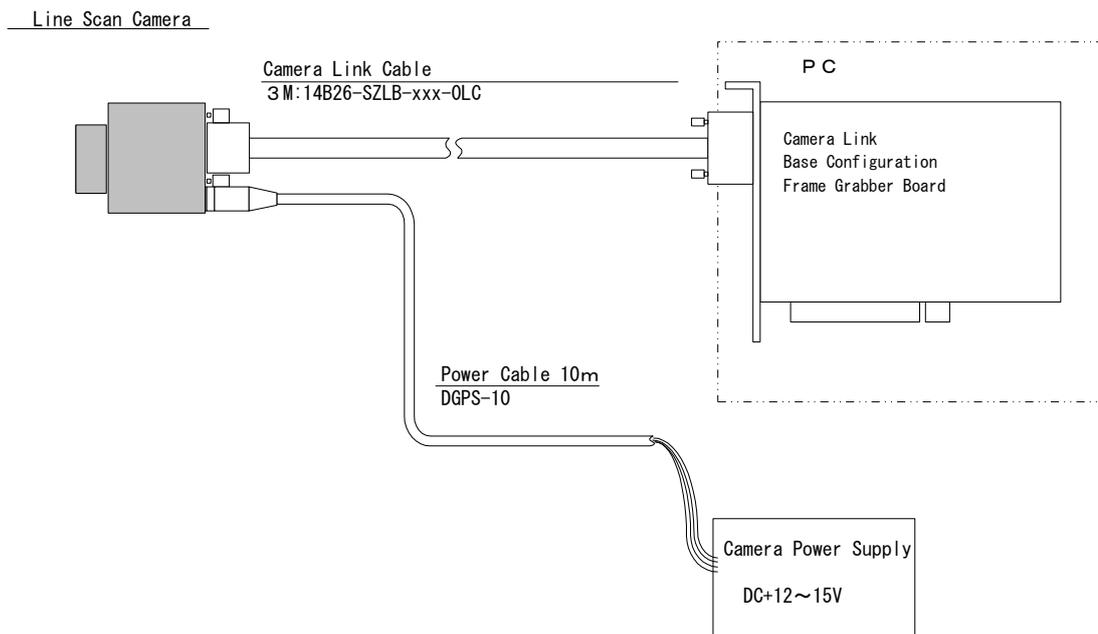


Figure 3-1-1 Connections between Camera and Frame Grabber Board and Power Supply

- ◆ There are two connectors available for the Camera Link Medium Configuration board. Always check the frame grabber board specifications before making connections.

<Note: Choosing the appropriate Camera Link cable length >

According to the Camera Link Specification, the maximum cable length is 10m. But the maximum cable length to be able to transfer data depends on the type of cable performance and clock speed. The actual maximum transmission distance becomes less than 10m at faster clock speeds, though the transmission distance of 10m is feasible at slower clock speeds.

The following table shows values being calculated in accordance with the Camera Link Specification 2007.Version1.2., using a typical cable (14B26-SZLB-xxx-0LC from 3M) and frame grabber board (Solios from Matrox). Please choose the appropriate Camera Link cable type and length for your application. We recommend you perform a connection test in advance.

Table 3-1-1 calculated value of maximum cable length

Solios model	clock speed (MHz)	maximum cable length (m)
SOL 6M CL E* (20~66MHz)	40	9.8
	66	8.0
SOL 6M FC E* (20~85MHz)	75	7.6
	85	5.8

3.2 Input / Output Connectors and Indicator

The layout of input /output connectors and the indicator lamp are as follows.

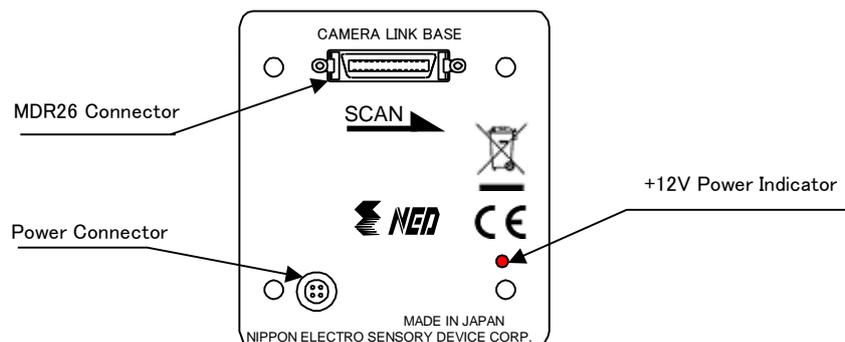


Figure 3-2-1 Input/Output Connectors and Indicator

3.3 Connectors · Pin Assignments · Cables

This camera uses the Base Configuration of Camera Link interface standards. The figure shown below shows the interface for the camera and a typical implementation for the frame grabber interface.

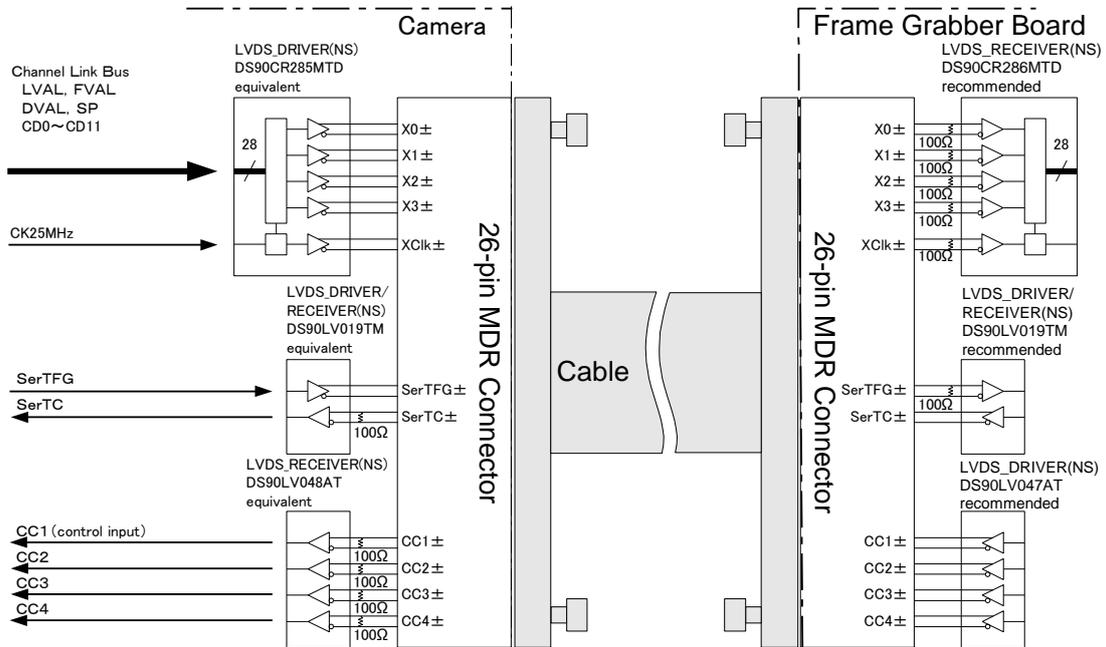


Figure 3-3-1 Camera / Frame Grabber Interface

- ◆ Set the LVDS, Channel Link receiver side to 100-ohm termination.
- ◆ With the driver side of LVDS, even if not used, do not make it open but set the logic to H or L.



Figure 3-3-2 Circuit of LVDS

The camera has 26-pin MDR connectors for control signals of Camera Link, data signals and serial communications. The camera also has a 4-pin HIROSE connector for power supply.

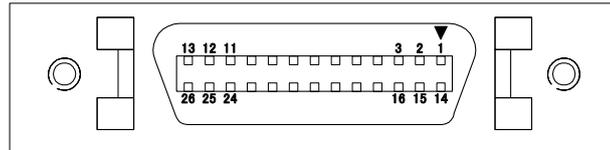


Figure 3-3-3 Camera Link Connector

- Half pitch (miniature half ribbon) shape
- Locking screw (UNC #4-40) type

Table 3-3-1 Camera Link Connector (26-pin MDR Connector) pin assignments

No	NAME	No	NAME	I/O
1	Inner Shield	14	Inner Shield	
2	X0-	15	X0+	Out
3	X1-	16	X1+	Out
4	X2-	17	X2+	Out
5	Xclk-	18	Xclk+	Out
6	X3-	19	X3+	Out
7	SerTC+	20	SerTC-	In
8	SerTFG-	21	SerTFG+	Out
9	CC1-	22	CC1+	In
10	CC2+	23	CC2-	In
11	CC3-	24	CC3+	In
12	CC4+	25	CC4-	In
13	Inner Shield	26	Inner Shield	

- Explanation of Signals

- Inner Shield : Shield cable (GND)
- X0+,X0-...X2+,X2- : Data output (Channel Link)
- Xclk+,Xclk- : Clock output for above data output synchronization (Channel Link)
- SerTC+, SerTC- : Serial data input (LVDS)
- SerTFG+, SerTFG- : Serial data output (LVDS)
- CC1+,CC1- : External synchronous signal input (LVDS)
*When using External Trigger
- CC2+,CC2- : Not in use (LVDS)
- CC3+,CC3- : Not in use (LVDS)
- CC4+,CC4- : Not in use (LVDS)

- Camera Link compatible cable

14B26 - SZLB - xxx - 0LC by 3M (or equivalent)

- ◆ To avoid uncoupling of cable connectors during power on, make sure to clamp them with locking screws.
- ◆ Do not unplug the cable while power is being supplied to the camera.

The pin assignment of the power supply connector is shown below.

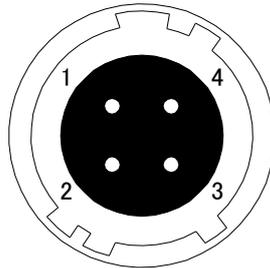


Figure 3-3-4 Power Supply Connector (HIROSE : HR10G -7R- 4PB)

- Round shape push-pull lock type

Table 3-3-2 Pin Assignment of Power Supply Connector

No	NAME	Color of Cable
1	12~15 V	White
2	12~15 V	Red
3	GND	Green
4	GND	Black

3.4 Power Supply

The camera requires a single power supply (DC+12~15V).

- ◆ When selecting a power source, choose one with the capacity to allow for inrush current. (15W or more recommended)
- ◆ Insert the cable plug securely until it locks into position. This is to prevent the connector from coming loose during power transmission.

- Compatible Cable (Compatible plug): DGPS -10 (HIROSE : HR10A -7P - 4S)
- Power supply voltage: DC+12~15V (+/-10%)
- Consumption Current (rated): DC+12V : 270mA

- The LED lamp illuminates when DC +12~15V power is being supplied to the camera.
- ◆ If the lamp fails to illuminate even after power is supplied, turn OFF power immediately. Inspect wiring. Check the voltage and capacity of the supplied power source.

4 Camera Control

The camera can be controlled through serial communication. Two methods can be used to change the camera's parameters. The first approach is to change parameters using NCCtrl02 (Camera control software). (See "8 NCCtrl".) Or you can also change the parameters directly from your application by using binary read/write commands to set values in the camera register.

The camera can be used without the serial interface after it has been set up correctly.

4.1 Flow of Camera Control

4.1.1 Command Overview

The serial interface uses a simple ASCII-based command.

- Communication begins when the computer sends control commands to the camera.
- The camera receives and interprets the computer commands and then executes control operation accordingly.
- Transmission ends when the camera returns the analyzed results of control commands to the computer.
- ◆ Always allow the previous transmission to end before starting the next transmission. (Only one command can be sent per transmission.)

4.1.2 Command Format (PC to Camera Transmission)

- Format C [VAL] CR

CMD: Control text (1 Bytes)

VAL: Setting value (decimal, 1 Bytes x maximum 3 digits)

※When there is no set value, it is unnecessary.

CR: Carriage Return (0x0D)

<Example>

t 0 CR

4.1.3 Reply Format (Camera to PC Transmission)

- Format 1 > R CR
- Format 2 > [MEM] CR
- Format 3 > [SB] CR
- Format 4 EOT

> : Results start text (0x3E)
 R: Camera receive command analyzed results
 [SB] : Camera receive command send back
 [MEM] : Memory data readout value
 CR: Separated text (0x0D)
 EOT: Send command all text End text (0x04)

<Example>

>OK CR >r0 CR EOT

Table 4-1-3-1 Error Messages

Camera Response	Meaning
OK	Camera executed command
CMD ERR!	Command is not valid
CMD OVR ERR!	Command text line is too long
VAL ERR!	Parameter accepted was outside of specified
MEM ERR!	Memory error

Built-in memory

- Built-in memory using the EEPROM, can be rewritten.
- Endurance is built-in memory depending on the conditions of use, more than 100,000 times (typ).

4.1.4 Camera Control Commands

The table below shows the list of Camera Control Commands.

Table 4-1-4-1 List of Camera Control Commands

Control Item	CMD	VAL	Control Description
Gain	g	0~688	Setting Gain
CDS Gain	a	0~4	Setting CDS Gain
Offset	o	0~19	Setting Digital Offset
Video output switching	v	0,1,2	8 bit / 10 bit / 12 bit
Trigger mode switching	t	0,1	Free run / ExTrg
Memory Save	w		Store present setup data in memory
Memory Load	l		Readout setup data in memory
Memory Initializing	z		Reset to factory settings ※see 4.1.5

4.1.5 Memory Setup Values (Factory Settings)

The memory setup values (factory settings) are shown below.

Table 4-1-5-1 Memory Setup Values (Factory Settings)

Control Item	CMD	VAL	Control Description
Gain	g	0	0dB
CDS Gain	a	4	-3dB
Offset	o	4	4±3 Level when the light shielding
Video output switching	v	0	8 bit
Trigger mode switching	t	0	Free Run

4.2 Details on Commands

4.2.1 Setting Gain

Sets gain in between 0 ~ 688.

- Format C VAL CR
- CMD g
- VAL 0 - 688

<Example>

```
g5 CR (Setting digital gain 0.16dB)
>OK
>g5
```

4.2.2 Setting CDS Gain

Sets CDS gain in between 0 - 4

- Format 2 C VAL CR
- CMD a
- VAL 0 - 4

<Example>

```
a3 CR (Setting CDS gain 9dB)
>OK
>a3
```

4.2.3 Setting Offset

Sets offset in between 0 - 19

- Format CMD VAL CR
- CMD o
- VAL 0 - 19

<Example>

```
o5 CR (Setting offset 5/8bit · 20/10bit · 80/12bit)
>OK
>o5
```

4.2.4 Switching video output

Sets the exposure mode.

- Format CMD VAL CR
- CMD v
- VAL 0, 1, 2 (Switching output data 8bit/10bit/12bit)

<Example>

v0 CR CR (Setting output data 8bit)

>OK

>v0

4.2.5 Switching trigger mode

Switch trigger mode.

- Format CMD VAL CR
- CMD t
- VAL1 0,1 (Switching trigger mode FreeRun/ExTrg)

<Example>

t0 CR (Setting Free Run mode)

>OK

>t0

4.2.6 Memory Save

Stores current camera settings in the flash memory.

- Format CMD CR
- CMD w

<Example>

wCR

>OK

>w

4.2.7 Memory Load

Reads out the camera settings from the flash memory.

- Format CMD CR
- CMD l

<Example>

lCR

>OK

>l0

4.2.8 Memory Initializing (Initializing Camera Settings)

Reset the flash memory to the factory default.

- Format CMD CR
- CMD z

<Example>

```
zCR
>OK
>z0
```

4.3 Startup

After turning on, the camera runs a startup procedure before it starts getting images and outputting data.

The startup procedure is as follows.

- (1) The camera initializes the hardware.
- (2) Reads out the latest camera settings from the flash memory. (User settings if any or factory default settings)
- (3) Sets up the camera with the setting values from the flash memory.

After this sequence, the camera is ready to get images and output data.

4.4 Saving and Loading Camera Settings

The camera setting data is saved in the internal memory (flash memory) and is loaded from the memory when turning on the power supply or loading (sending the “I” command).

◆ The number of times the flash memory can be rewritten will vary depending on actual operational conditions. After turning on the power supply, the camera always checks the memory status. If the data is not within the designated range due to a malfunction or other type of trouble, the memory will be automatically rewritten with the factory settings.

◆ If disconnecting camera power while rewriting the memory, all data saved in the memory will be deleted.

As it takes several seconds to rewrite the memory, do not disconnect the power supply before receiving the response from the camera.

Commands for rewriting the memory are as follows.

- Reset to factory settings (z)
- Store present data in memory (w)

- ◆ When changing the factory setting exposure mode, be sure to send the control input signal (CC1) from the frame grabber board. If you do not send CC1 or sending control input signals are out of the designated range, you cannot get images and can not change the setting. See 4.7.1 and 4.7.2.

Table 4-4-1 Camera Operation Mode and Control Input

Camera operation mode (Exposure mode)	Control input (from frame grabber board)
Free Run (Programmable time setting) (Factory Setting)	Not in use
Ext Trg (External trigger)	External trigger (CC1) is required

4.5 Serial Communication Settings

Serial communication is performed through the Camera Link Interface
The table below shows the serial communication settings.

Table 4-5-1 Serial Communication Settings

Parameter Items	Setup Value
Communication Speed (Baud rate)	9600bps
Data Length	8bit
Parity Bit	None
Stop bit	1bit
Flow Control	None

4.6 Video Output Format

The camera outputs 8-bit or 10-bit digital data.


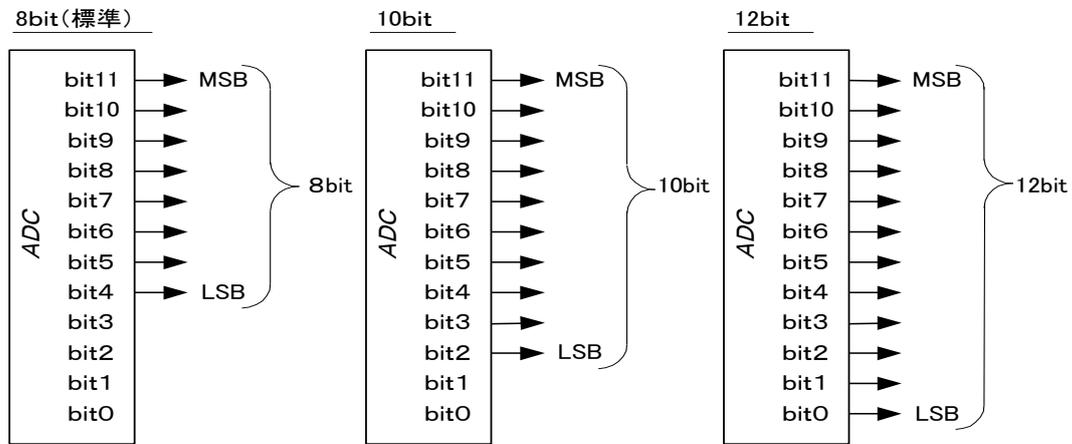


Figure 4-6-1 Pin Assignments of Digital Data

- ◆ The A/D converter of the camera has a 10-bit resolution. For 8-bit output, the upper 8-bit signal can be output as a video data.

The video output phase is shown below.

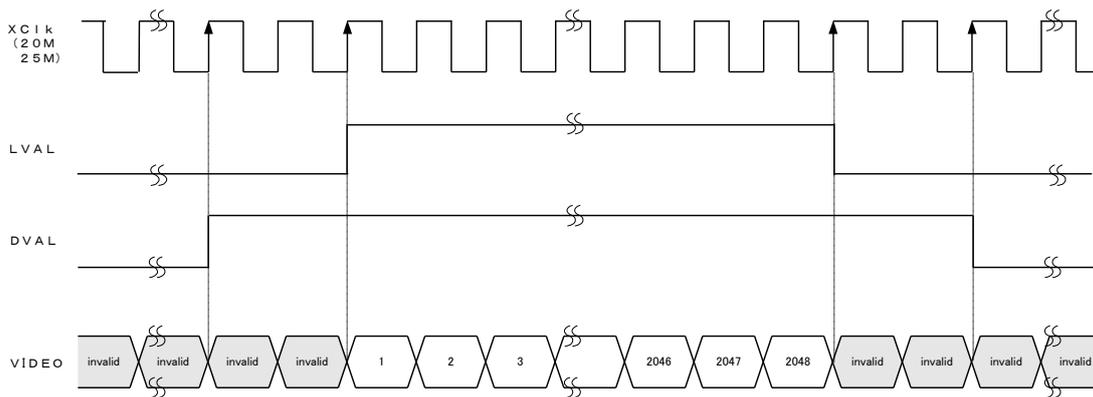

- ◆ FVAL = 0 (low level) fixed
- ◆ DVAL = 0 (low level) fixed

Figure 4-6-2 Video Output Phase

4.7 Exposure Mode and Timing Chart

The camera has three exposure modes. The overview of each mode and the timing are as follows.

4.7.1 Free Run Mode

In free-run exposure mode, the camera generates its own internal control signal based on two programmable parameters, exposure time and readout time. Timing relationship of each signal is as follows.

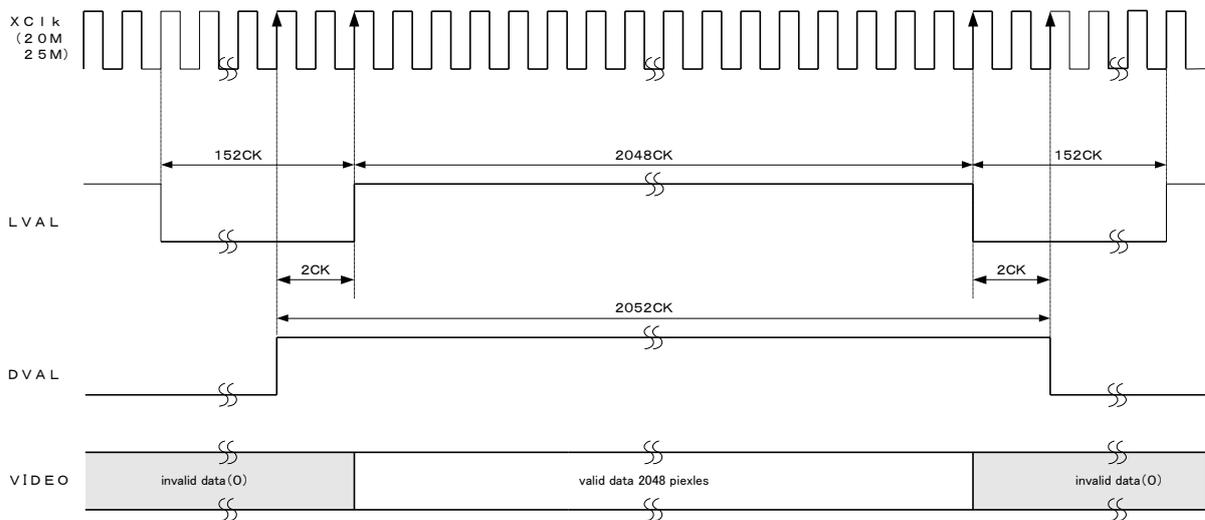


Figure 4-7-1-1 Timing Chart

4.7.2 External Trigger (ExTrg) Exposure Mode

In external trigger exposure mode (Trigger Edge), the exposure time is determined by the setting made through serial communication. Each exposure starts with the rising edge and the line period is determined by the time from rising edge to rising edge of the trigger pulse. Timing relationship of each signal is as follows.

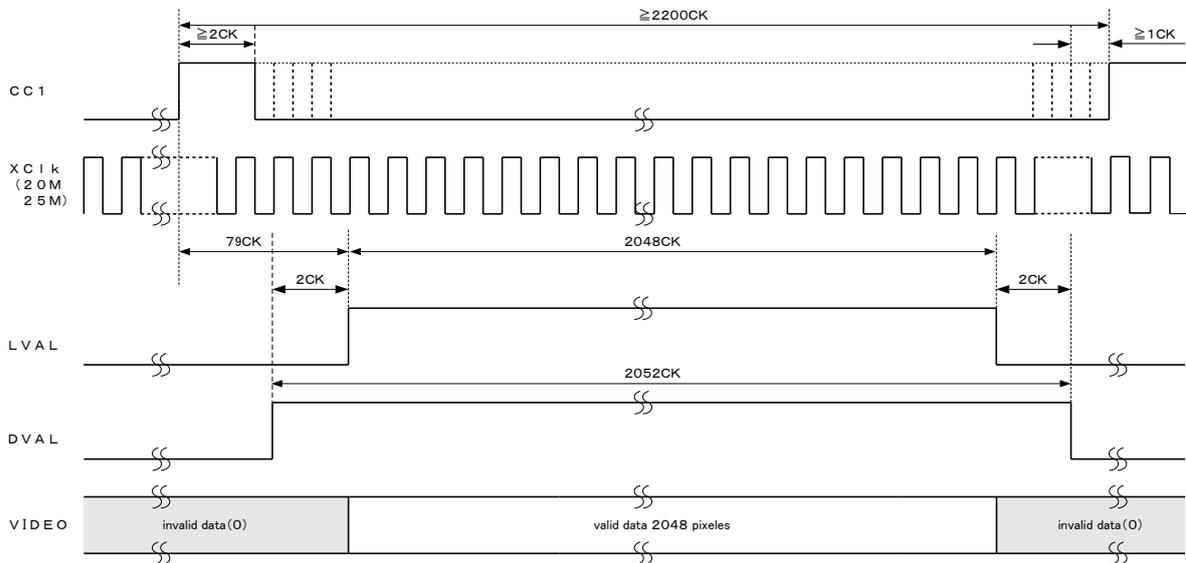


Figure 4-7-2-1 External Trigger (Trigger Edge) Exposure Mode

4.8 Setting Offset

In the figure below, the horizontal axis indicates the amount of incident light and the vertical axis indicates the output. F_s shows the output at saturation. D_d shows the output at darkness. (Both F_s and D_d are digital.) S_e shows the saturation current, or the amount of exposure when the output saturates.

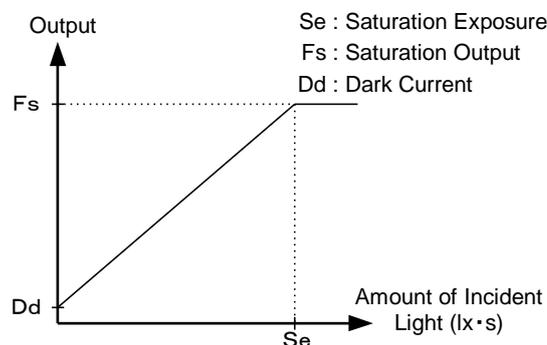


Figure 4-8-1 Saturation Exposure and Dark Current Output

By setting the offset, you can set the Y-intercept arbitrarily. DF shows the digital offset value. The gradient of the line does not change.

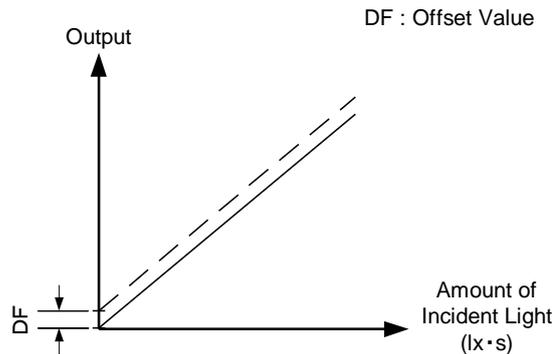


Figure 4-8-2 Offset Adjustment

- ◆ Adjust amount of offset in accordance with the requirements of your camera system.

4.9 Setting Gain

The camera can adjust the analog gain (x1 to x11.2 in 21 steps) and the digital gain. As shown in the figure below, increasing the gain setting increases the gradient of the camera’s response curve and results in a higher camera output for a given amount of light. Analog gain can be changed by sending the "gax" command. Digital gain can be changed by sending the "gdx" command.

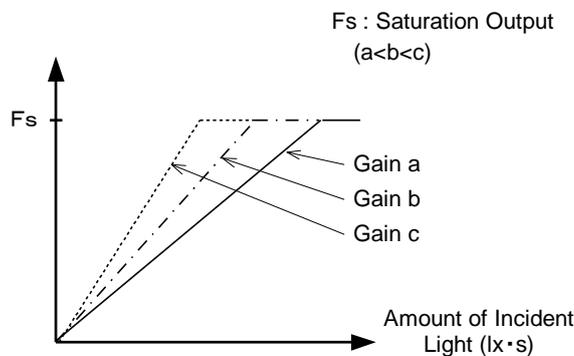


Figure 4-9-1 PGA Gain Adjustment


- ◆ Gain and noise values are proportionally related.
- ◆ Adjust the amount of gain in accordance with the requirements of your camera system.

5 Confirming Camera Settings

5.1 Before Power-on

Please check the exterior for any damages that may have been transportation or handling etc.

(1) Confirm the pin assignment of the power cable.

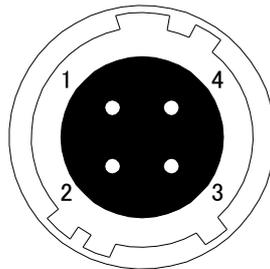

No	NAME	Color of Cable
1	12 ~15V	White
2	12 ~15V	Red
3	GND	Green
4	GND	Black

Figure 5-1-1 Pin Assignment of Power Cable

(2) Confirm the direction and the channel of the cables. Some Camera Link cables are directional.

If one of the connectors says “Camera side”, connect this to the camera.

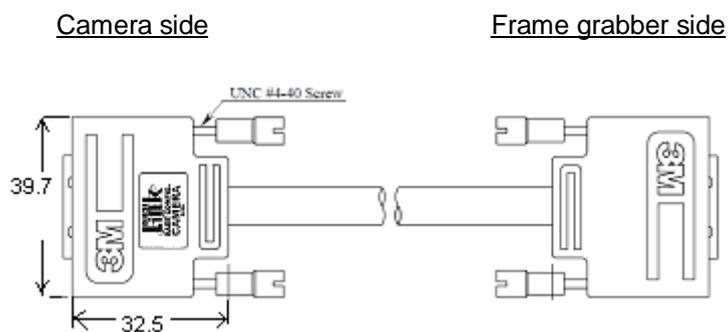


Figure 5-1-2 Connection Direction of Camera Cable

The connection channel of in the case of using a “Solios” board:

CL1 = CHANNEL #0

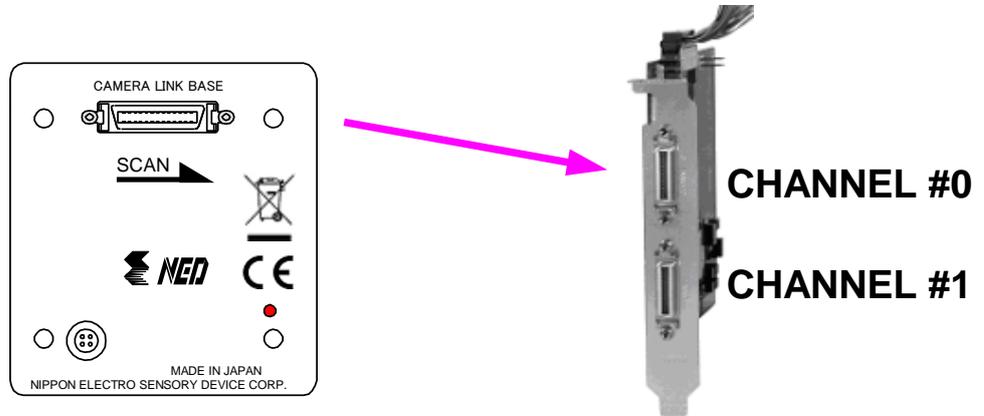


Figure 5-1-3 Channel of Camera Link Cables

5.2 After Power-on

(1) Confirm sent and received commands using the camera control utility. Launch NCCtrl02, set COM port and connect. Click “Memory Dump” and wait for the response.

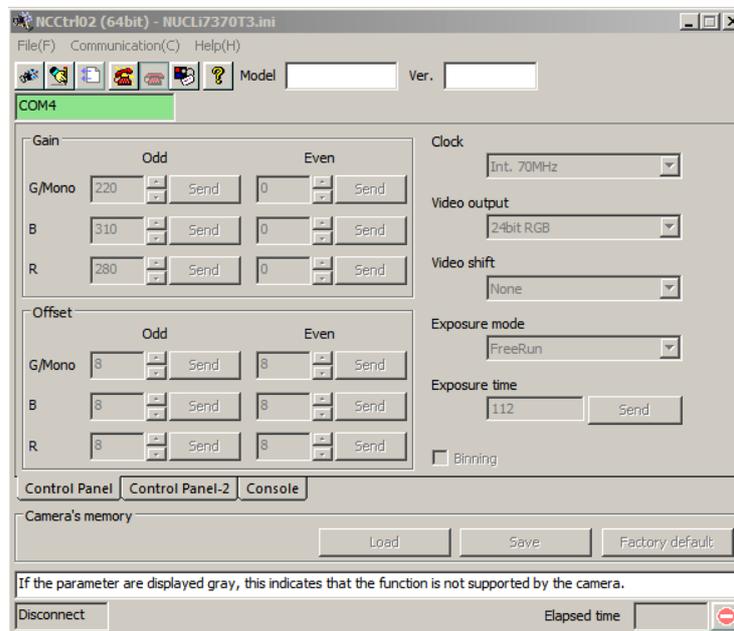


Figure 5-2-1 Confirmation of Connection

(2) Set a trigger mode and a video output mode with the camera control utility.

Trigger mode = Free run

Video output mode =8bit

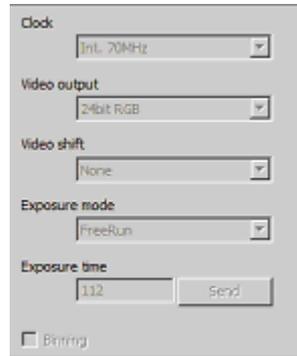


Figure 5-2-2 Exposure Mode and Video Output Mode

◆ If you have your own application to check the images, select suitable settings.

(3) Capture images using a camera interface board utility. In the case of Matrox's Solios, it is convenient to use Intellicam.

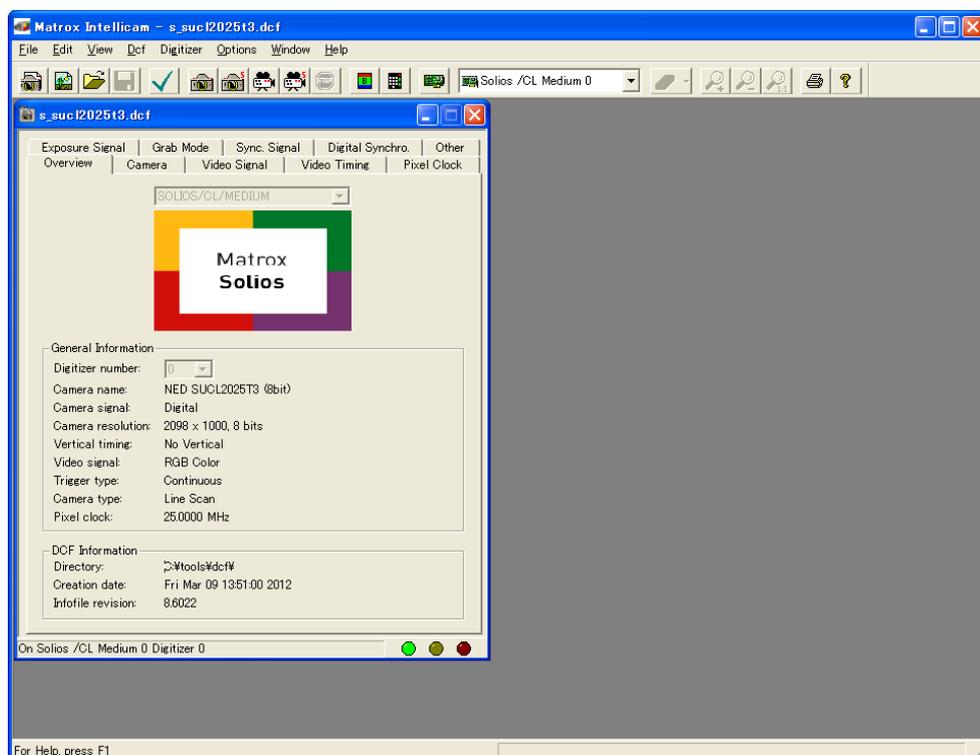


Figure 5-2-3 Solios Window

5.3 During Operation

(1) Does an acquisition time out error occur?

<Cause>

<1> Captured images are too large.

If there are many filtering processes, the assignments to the driver may be insufficient.

<2> The cable is detached from the connector

Ensure that the power cable and Camera Link cables are connected to the camera firmly.

<3> Camera Link cables are susceptible to noise when the cables are laid near a light source inverter line or a power line. The personal computer in use may be freeze and need to be reset.

(2) Are there dark lines in the direction of vertical scanning on the image?

<Cause>

<1> Dust on the sensor window

Dust may get onto the sensor window from the inside or the outside of the camera. Remove the dust with air or a lens cleaner.

6 Sensor Handling Instructions

6.1 Electrostatic Discharge and the Sensor

CMOS sensors are susceptible to damage from electrostatic discharge and can deteriorate as a result. Take care when handling the sensor.

6.2 Protecting Against Dust, Oil and Scratches

The CMOS sensor window is part of the optical path and should be handled like other optical components with care. If you use the camera in a dusty area, prepare a dust-proof enclosure. Dust can obscure pixels, producing dark lines on the image.

6.3 Cleaning the Sensor Window

Dust: Can usually be removed by blowing the window surface using a compressed air blower.


Oil: Wipe the window with a lint-free cloth wiper moistened with ethyl alcohol carefully and slowly.


When there is dust or smudges on the sensor window, it appears in the same way as noise on the image. Please remove it appropriately.

7 Troubleshooting


The following pages contain several troubleshooting charts that can help you find the cause of problems users sometimes encounter.


7.1 No Image

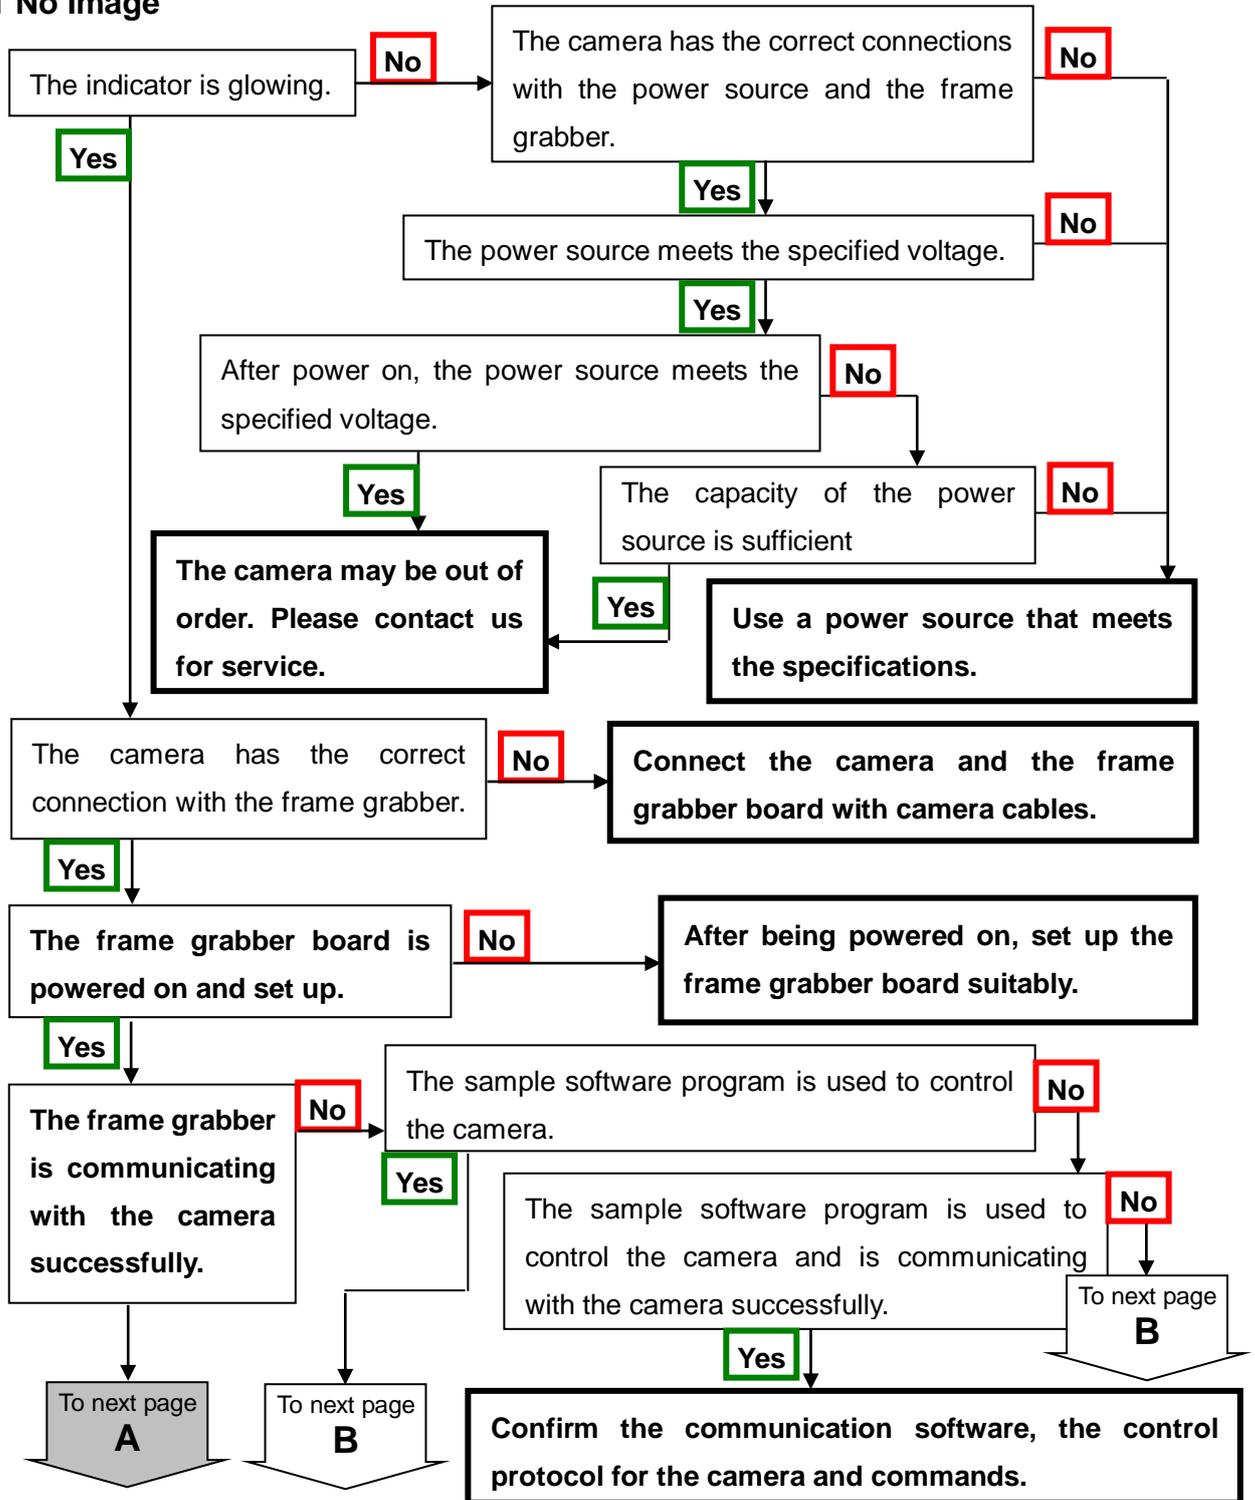

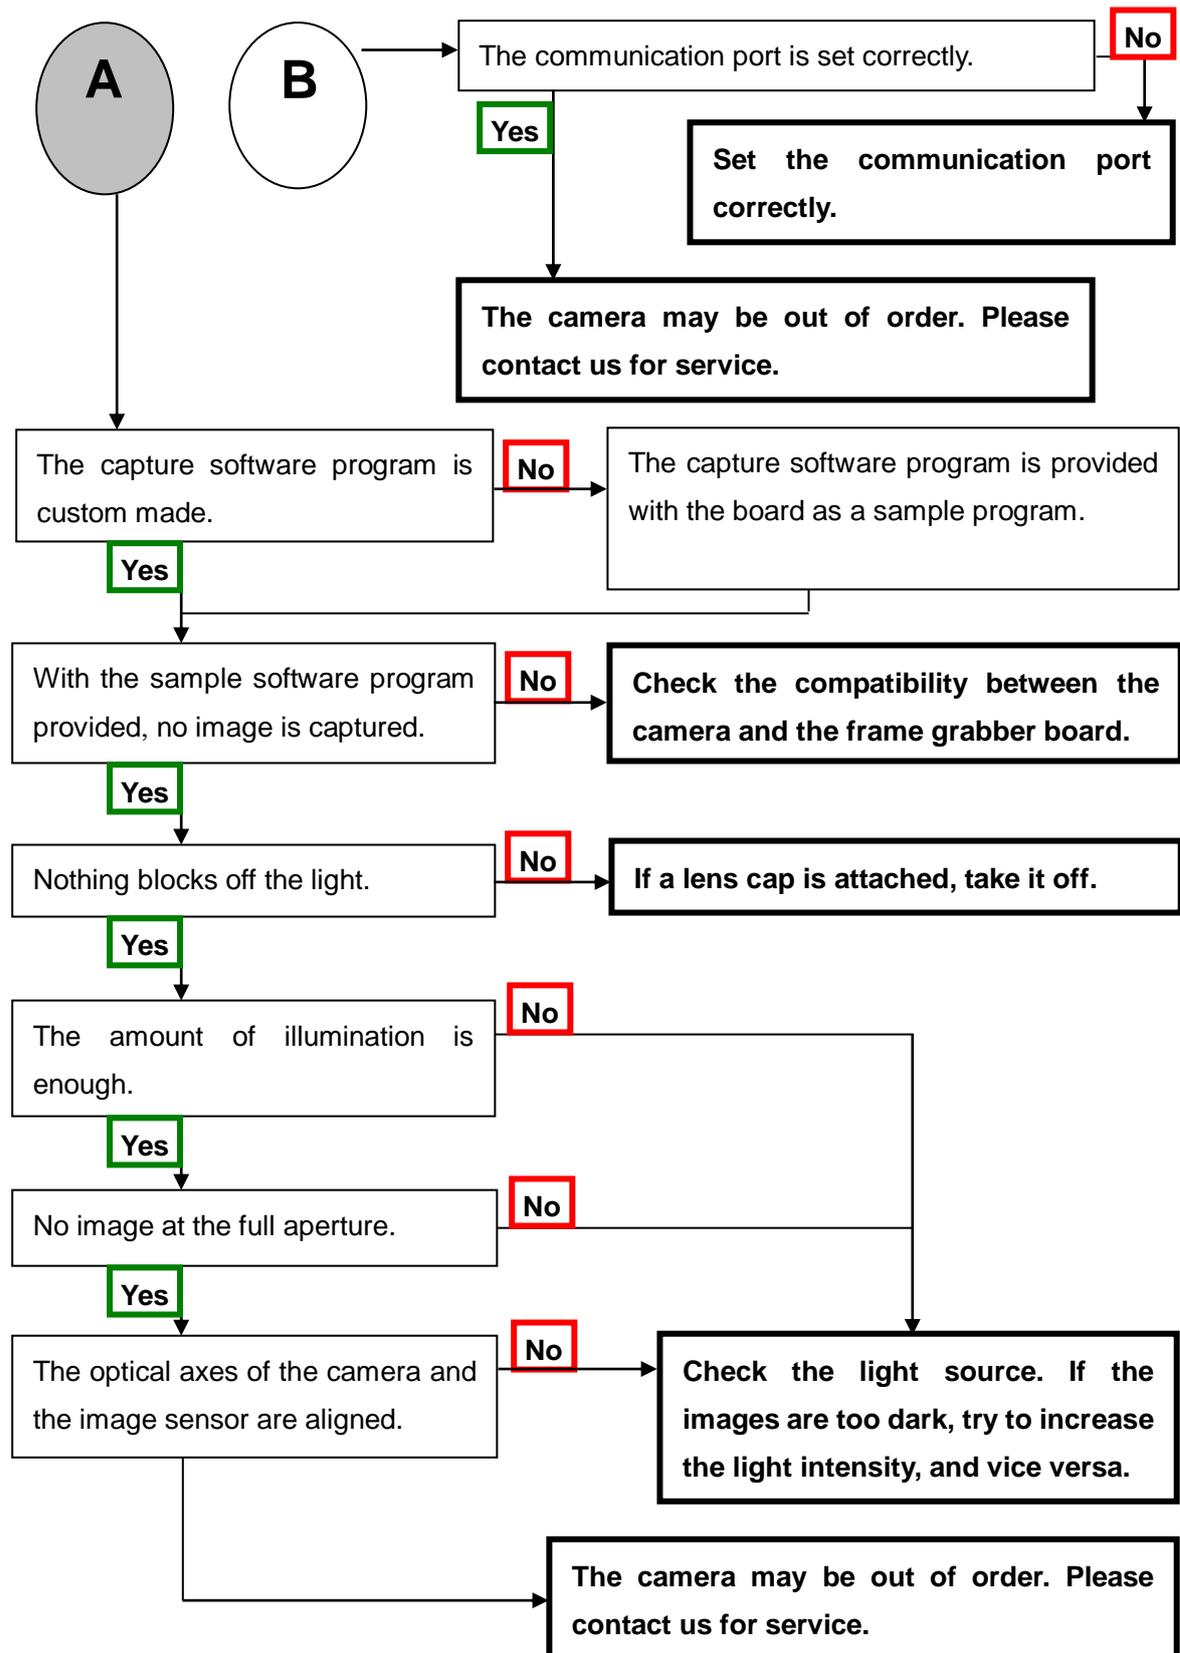


7.2 Noise on Image

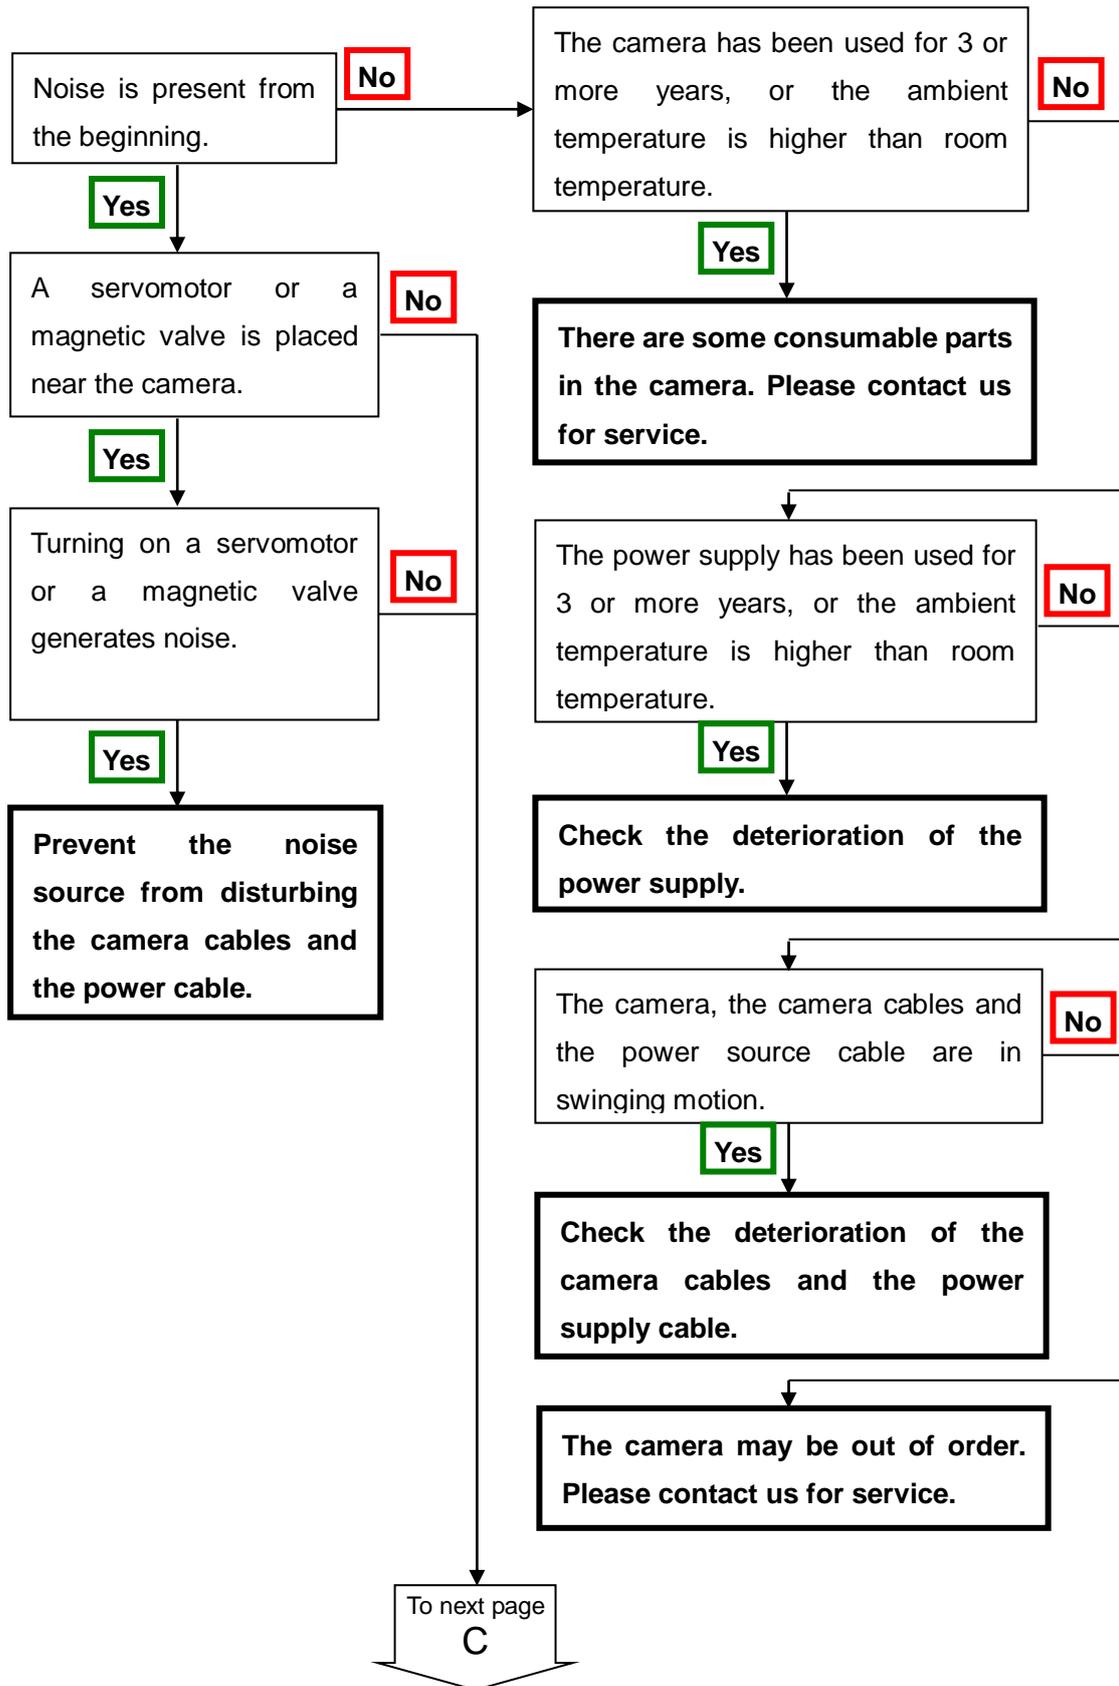

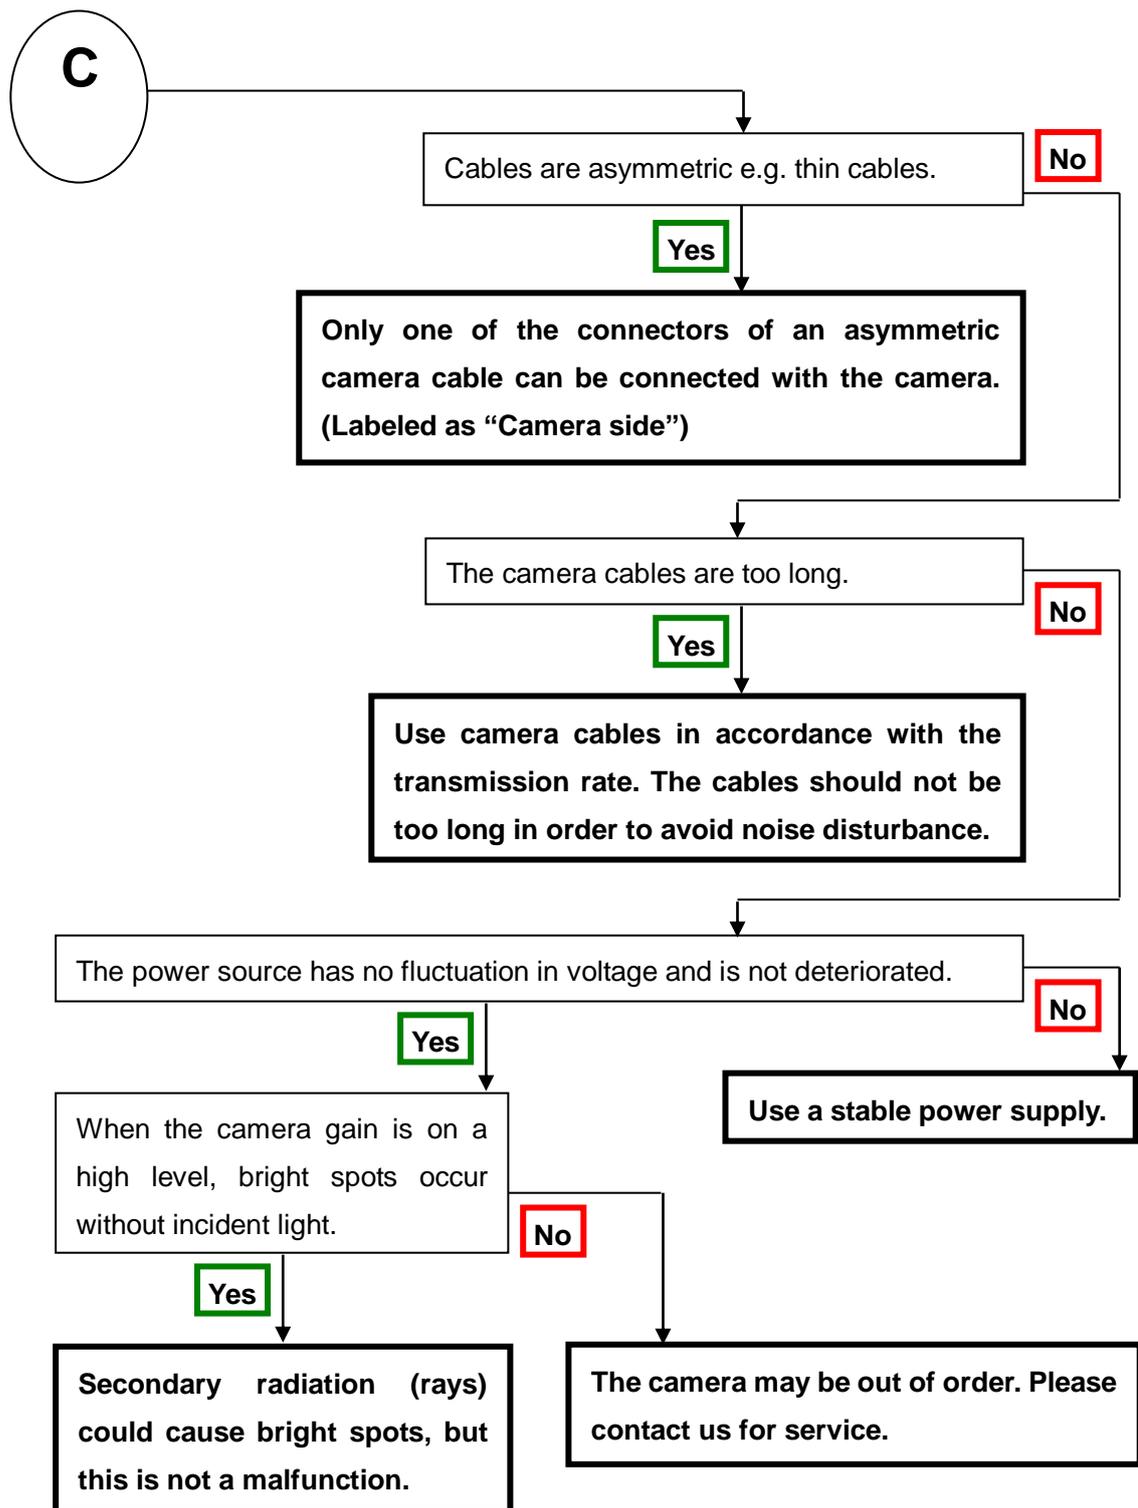

7.3 Camera becomes hot

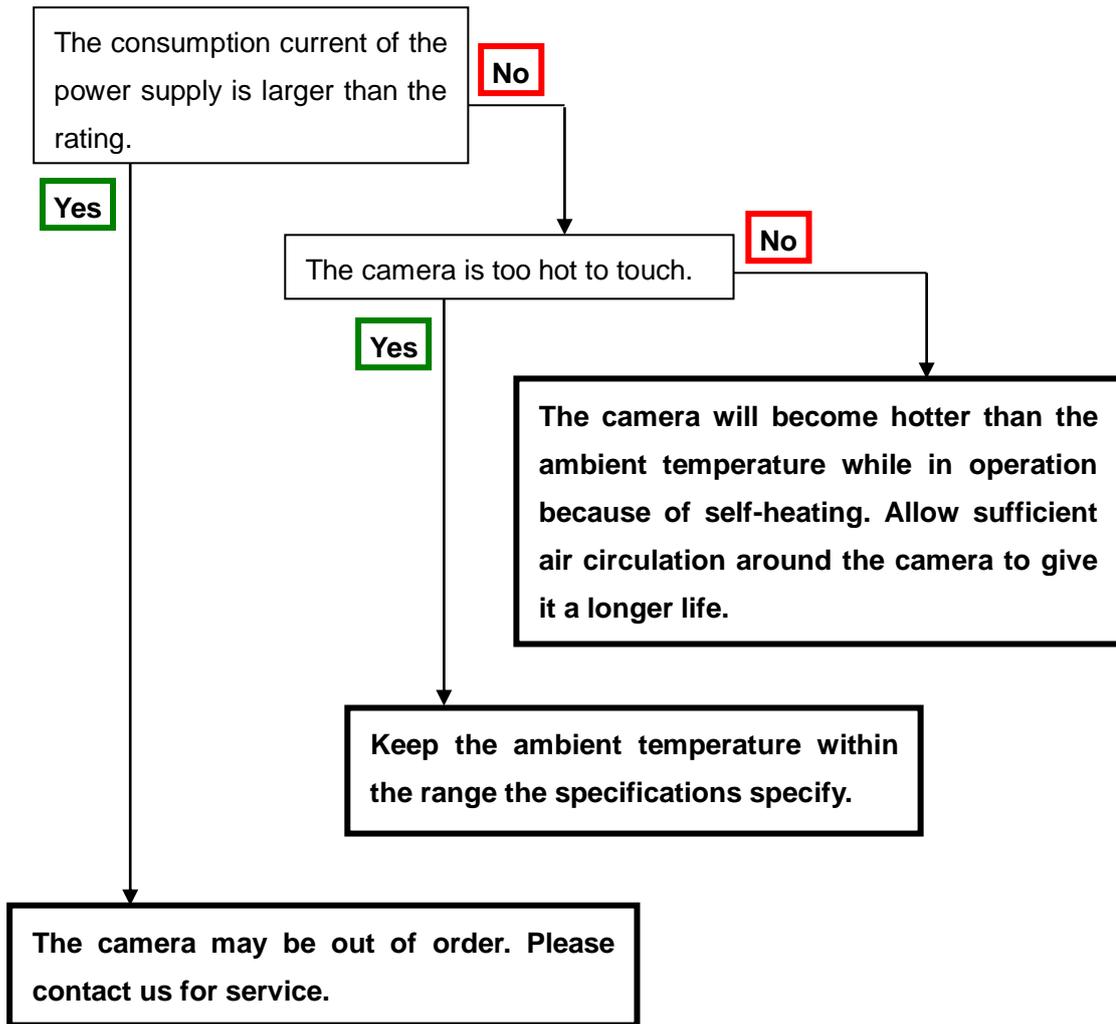

8 NCCtrl

8.1 Overview

NCCtrl02 is software designed for line scan cameras that support the NED camera control protocol (NCCP). This software enables you to remotely control line scan cameras from a PC.

The following interface connections are available:

- 1) COM port (RS232C)
- 2) Camera Link

8.2 System Requirements

PC: PC/AT compatible

OS: Microsoft Windows series (9x / NT / 2000 / XP)


Free disk space: 1 MB – 2 MB

(The required size may vary depending on the number of camera setting files)

The following system environment is required for the respective interfaces.

For COM port (RS232C) connection:

- 1) COM port that is compatible with the hardware and OS
- 2) RS232C cross cable (Dsub9s – Dsub9s)

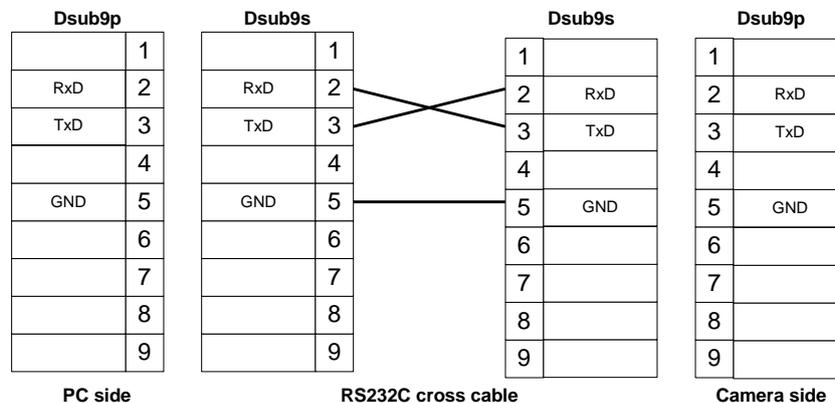

For Camera Link connection:

- 1) Camera Link compatible frame grabber board and device driver must be installed.

The DLL file for Camera Link API provided by the frame grabber manufacturer must be included. For details, ask the frame grabber manufacturer.

- 2) Camera Link compatible cable

8.3 Install


Copy the NCCtrl02 folder from the media (CD-ROM, etc) provided to your hard disk.

8.4 Uninstall

1) Delete NCCtrl02 folder and all data files that included in that folder.


8.5 Operation

8.5.1 General description

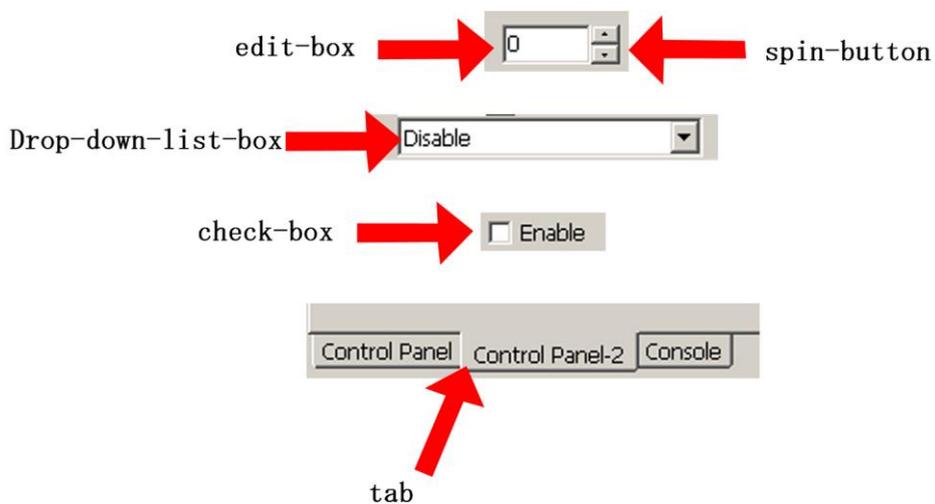


8.5.2 Starting NCCtrl

Start Windows Explorer and double-click the NCCtrl02.exe icon.

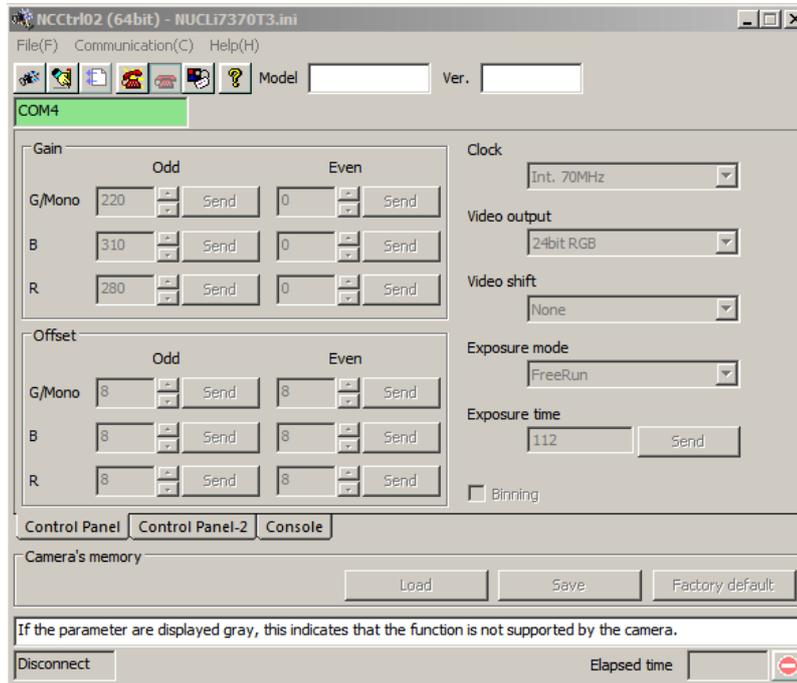


There are some buttons in the tool-bar. The function of each button is follows.

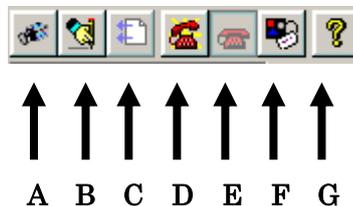

- A: Open a camera setting file (*.ini file)
- B: Export the parameters to text file (*.txt file)
- C: Load the parameters from a text file (*.txt file)
- D: Connect to the camera.
- E: Disconnect from the camera
- F: Communication settings
- G: Version information.

8.5.3 Open the control setting file

- 1) Click on tool-bar button “A”.
- 2) Select the appropriate setting file (*.ini file) and click on the "Open" button.
- 3) The setting is loaded, and each control parameter is initialized.

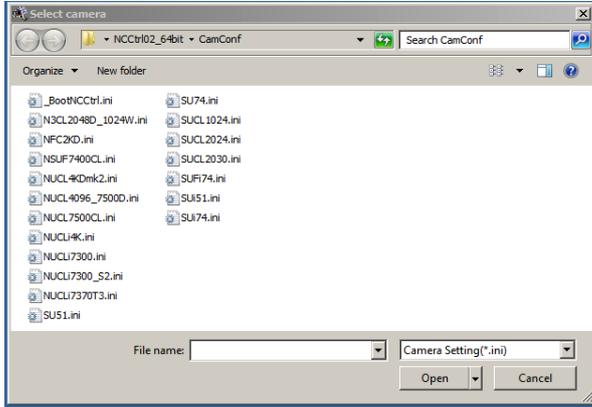


Note: **If the parameters displayed are gray, this indicates that the camera does not support the function.**

NCCtrl memorizes automatically the setting file name that was last opened. This file is automatically opened when NCCtrl is booted up.

8.5.4 Selecting interface and Timeout setting

8.5.4.1 Selecting interface

- 1) Click tool-bar button F.
- 2) Select the desired interface in the Drop-down-list-box.

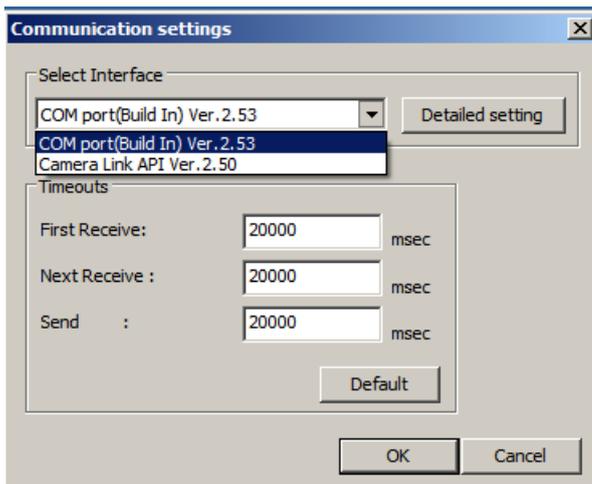


- 3) Using the “Detailed setting” button, you can change the interface setting.
- 4) Click on the “OK” button to complete this operation. Click on the “Cancel” button to cancel this operation.

Note: NCCtrl memorizes settings automatically. So you do not have to repeat this operation every time.

8.5.4.2 Setting the COM port

1) Set each item as follows. (NED standard)

Unless in cases where different settings have been specified.

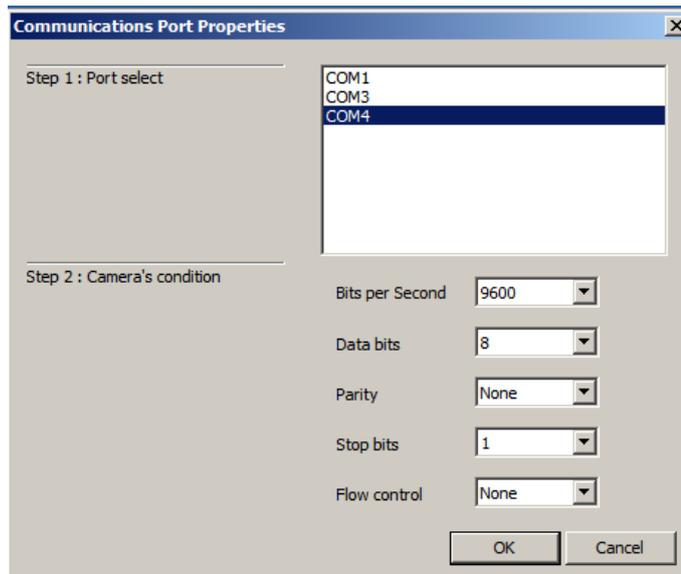

- (1) Port: Select connecting port.
- (2) Bits per Second: 9600
- (3) Data bits: 8
- (4) Parity: None
- (5) Stop bits: 1
- (6) Flow control: None


Note: Other parameter should not be used.

2) Click on the "OK" button to complete this operation.


Click on the "Cancel" button to cancel this operation.

Note: NCCtrl memorize settings automatically. So you do not have to repeat this operation every time.

8.5.4.3 Setting Camera Link

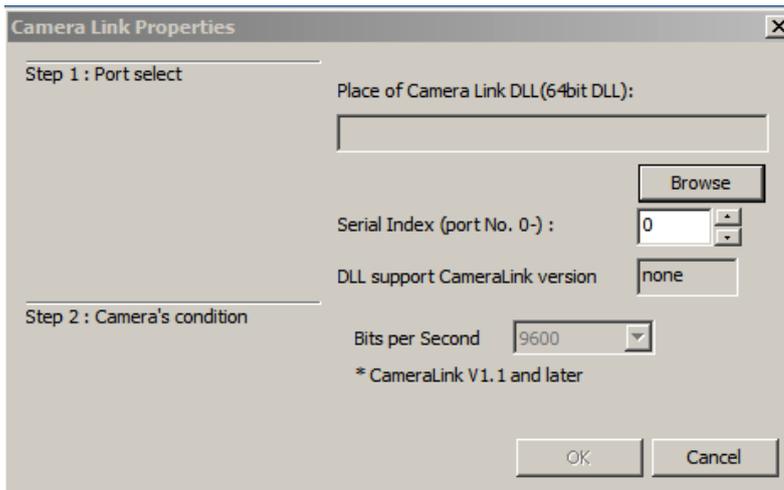

- 1) Enter the DLL file name of Camera Link API in the edit-box, or click “Browse” button and select DLL file.

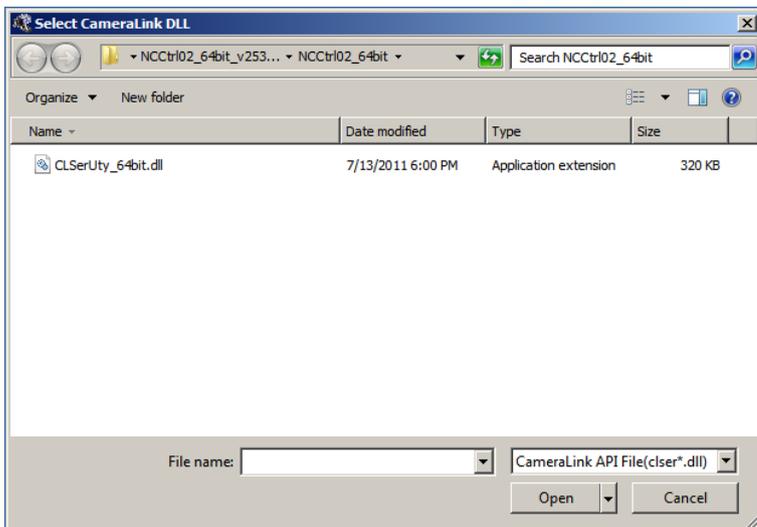


- 2) Enter value corresponding to the position of Camera Link cable to connect into the “Serial Index” column.
- 3) Click on the “OK” button to complete this operation.
Click on the “Cancel” button to cancel this operation.

Note: NCCtrl memorize settings automatically. So you do not have to repeat this operation every time.

Frame grabber manufacturers provide the DLL file for Camera Link API.
Some frame grabber boards are connected directly to the PC’s COM port.
In this case, set the interface to COM port (RS232C).
For details, please inquire with the frame grabber manufacturer.

8.5.4.4 Setting Timeout

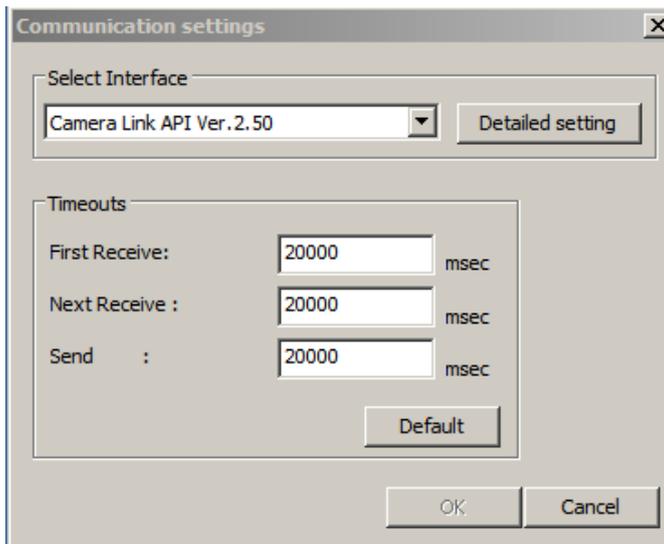

- 1) Enter timeout values to each edit-box in milliseconds.
Click "Default" button to restore all timeout values to default settings.
The meanings of each timeout are as follows.

First Receive : Maximum time, allowed to arrival of first characters after command transmission.


Next Receive : Maximum time, allowed to elapse between the arrival of two characters.

Send : Maximum time, allowed to completing of command transmission.

- 2) Click on the "OK" button to save the setting.
Click on the "Cancel" button to cancel the setting.

Note: NCCtrl memorizes settings automatically. So you do not have to repeat this operation every time.


8.5.5 Connect

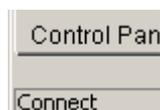

Click on tool-bar button D. Then you can control the camera.


8.5.6 Disconnect and exit program

Click on tool-bar button E. Then click the "X" button in the top right of the window.

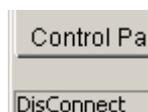


8.5.7 Check the contents of communication

Click on the "Console" tab at the bottom of the window to confirm the settings.

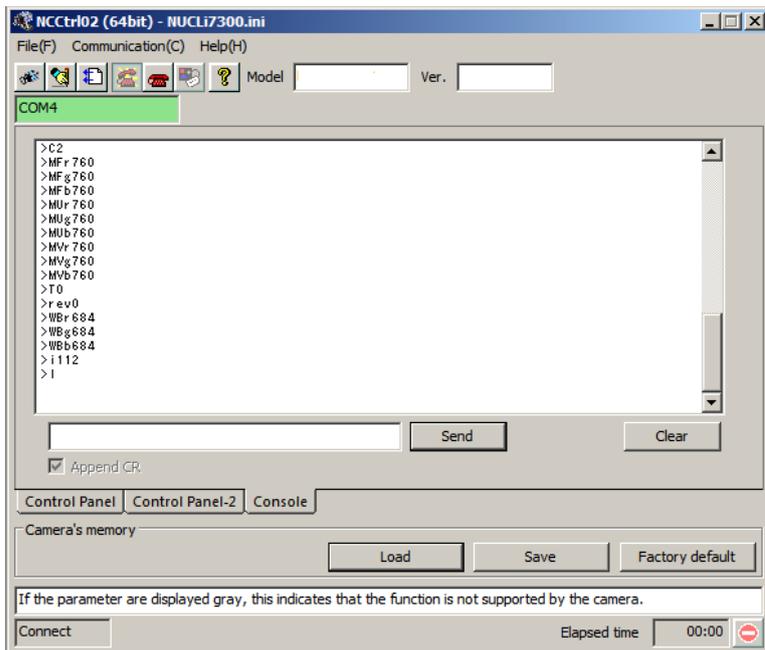

8.5.8 Export Parameters to text file


1) Click on tool-bar button B.

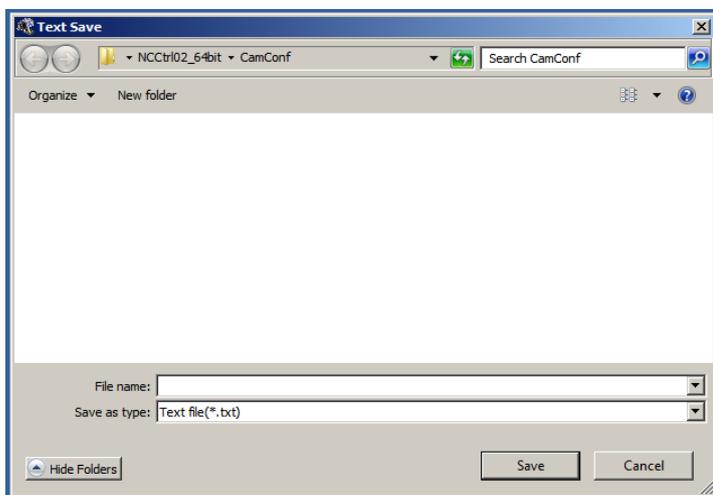

2) Input the desired file name and click on the "Save" button. The current settings value of each item is saved in text format.

8.5.9 Import Parameters from text file


- 1) Select menu “File” – “Text Load”

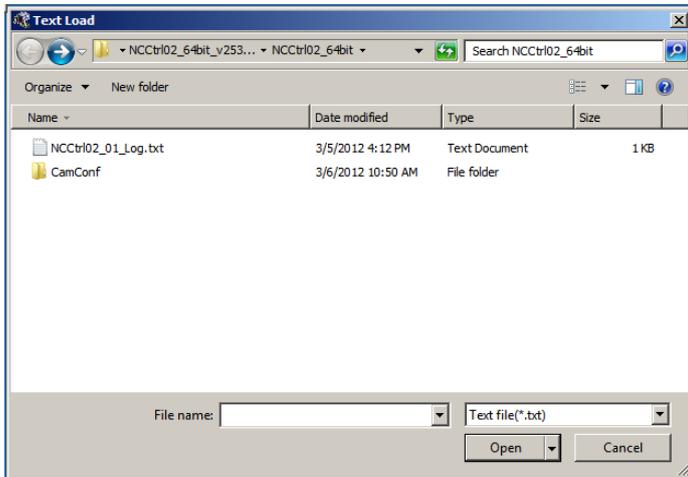


- 2) Select the file name and click on the “Open” button.
Each command written in the text file is executed sequentially.

8.6 Control


The controllable functions and range of values differ for every camera.
For details, refer to the camera specifications. (Section.4)

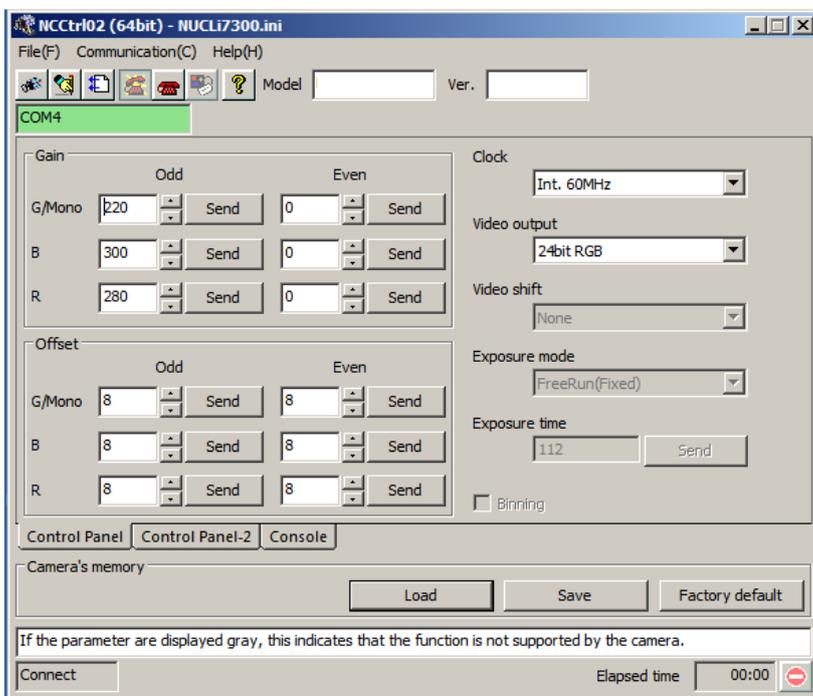

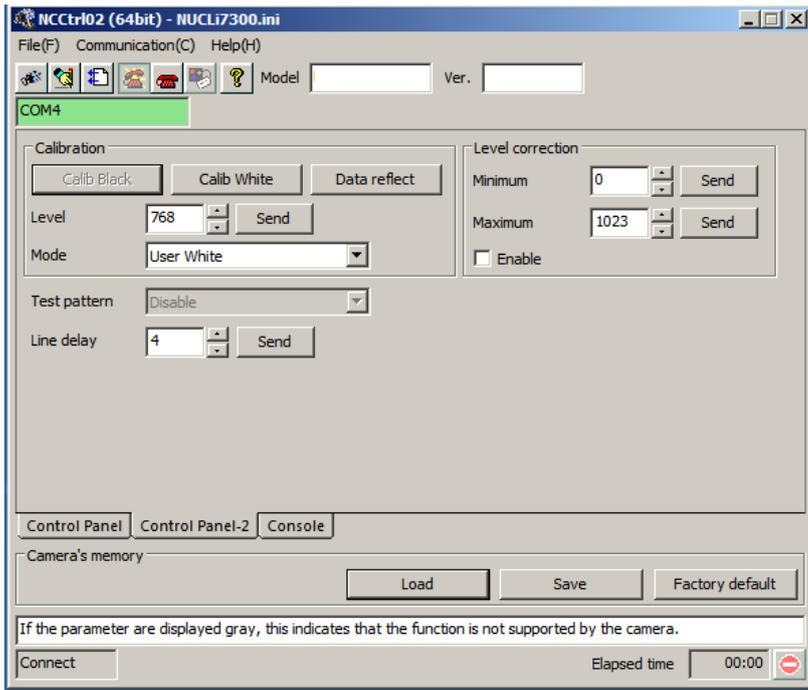


8.6.1 Gain and Offset

Enter the value directly into the edit-box or click on the spin-button to set the value. Then, click on the “Send” button to send the command to the camera.

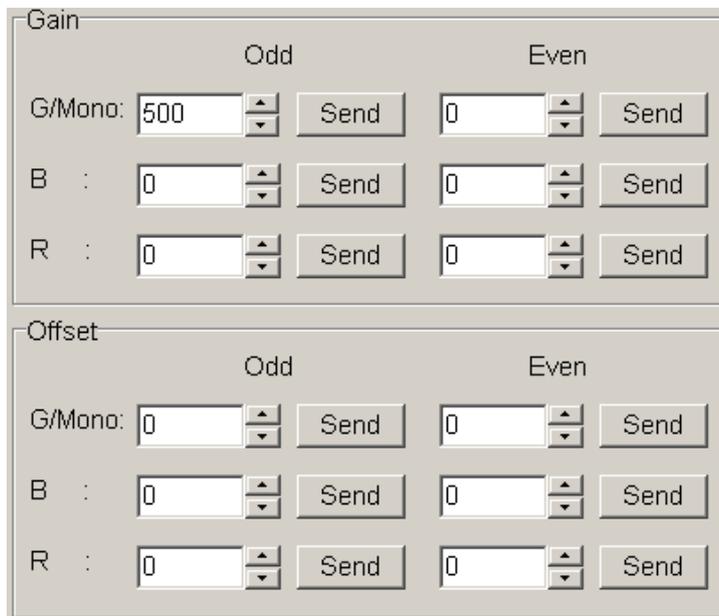

8.6.2 Clock, Video output, Video shift, Exposure mode

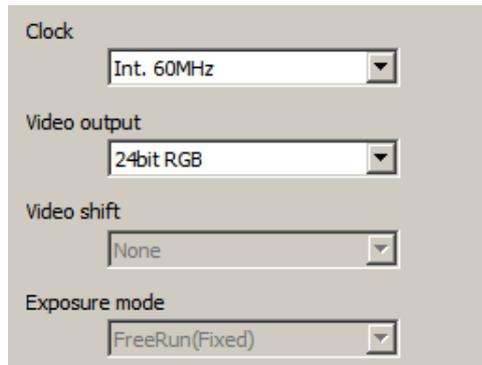

Clock
Int. 60MHz

Video output
24bit RGB

Video shift
None

Exposure mode
FreeRun(Fixed)

Every time you choose from the Drop-down-list-box, the command is sent to the camera.

8.6.3 Exposure time



Exposure time :
120 Send

Enter the value in the edit-box and click the “Send” button to send the command to the camera.


8.6.4 Binning



Binning

Every time you click the Check-box, the command is sent to the camera.

8.6.5 Camera Memory

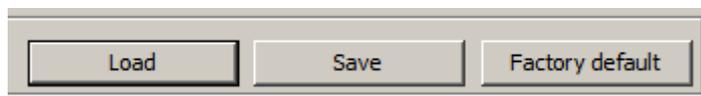

Load Save Factory default

- “Load”: Load data from camera memory
- “Save”: Save data into camera memory
- “Factory default”: Restore camera memory data to factory settings.

8.6.6 Calibration

- a) "Calib Black": Acquisition of black data (When you do this please cover the lens.)
- b) "Calib White": Acquisition of white data.
- c) "Data reflect": Save the calibration data to camera memory and apply the data.
- d) "Level": Enter the value directly in the edit-box or click the spin-button to set the value.
Then, click the "Send" button to send the command to the camera.
- e) "Mode": Every time you choose from the Drop-down-list-box, the command is sent to the camera.

8.6.7 Level Correction

- a) "Minimum": Enter the value directly in the edit-box or click the spin-button to set the value.
Then, click the "Send" button to send the command to the camera.
- b) "Maximum": Enter the value directly in the edit-box or click the spin-button to set the value.
Then, click the "Send" button to send the command to the camera.
- c) "Enable": Every time you click the Check box, the command is sent to the camera.

8.6.8 Test Pattern

Every time you choose from the Drop-down-list-box, the command is sent to the camera.

8.6.9 Line Delay



Enter the value directly in the edit-box or click the spin-button to set the value.
Then, click the “Send” button to send the command to the camera.

8.7 Software Upgrades

When you received the newest software from NED,
Please execute the following procedure.

8.7.1 NCCtrl upgrades

- 1) Check the old version of NCCtrl is not in operation.
- 2) Uninstall old version. (See “4.Uninstall”)
- 3) Install new version. (See “3.Software installation”)

8.7.2 Adding/Replacing control setting file

- 1) Check the old version of NCCtrl is not in operation.
- 2) Copy the control setting file(*.ini) to NCCtrl¥Camconf folder.

8.7.3 Adding/Replacing the interface Plug-in

- 1) Check the old version of NCCtrl is not in operation.
- 2) Copy the Plug-in file (*.dll) to the NCCtrl folder.

8.8 Data Transmission Programming

To make your own communication program, please refer to the sample programs in
NCCtrl¥SampleProgram folder.

8.9 NC Ctrl Troubleshooting

8.9.1 You can not change the exposure time with NC Ctrl

Cause : If these items are gray, the camera does not have a function to change exposure time.

Solution : First, change the exposure mode to “External Trigger” with NC Ctrl.

Then, provide a periodic trigger signal to the camera from the frame grabber board.

Please refer to the frame grabber board specifications.

In this case, the trigger signal period is equal to exposure time.

8.10 Attention on use

- 1) Reproducing and distributing without notice part or all of this software and this manual is prohibited.
- 2) Reverse engineering, decompiling, disassembling and modifying without notice part or all of this software is prohibited.
- 3) The specification of this software and the contents of this manual may be changed by NED at any time without notice.

9 Others

9.1 Notice

- No part of this document may be reproduced in any form, in whole or in part, without the express written consent of NED.
- The contents of this document are subject to change without prior notice.
- Every care has been taken in the preparation of this User's Manual. If you should discover any errors or omissions, please notify your nearest NED representative.

9.2 Contact for support

Nippon Electro-Sensory Devices Corporation

Head Office

2-5-12, Itachibori, Nishi-ku, Osaka 550-0012, Japan

Phone +81-6-6534-5300

Fax +81-6-6534-6080

Tokyo Office

Gibraltar Ohi BLD., Room No.402

1-45-2, Ohi, Shinagawa-ku, Tokyo 140-0014, Japan

Phone +81-3-5718-3181

Fax +81-3-5718-0331

West Japan Office

Twin Square 1-8-28 Enokida, Hakata-ku, Fukuoka, 812-0004, Japan

Phone +81-92-451-9333

Fax +81-92-451-9335

URL

<http://ned-sensor.co.jp/en>

E-Mail

sales@ned-sensor.com

9.3 Product Support

If there is a problem with your camera after checking it in accordance to the troubleshooting, turn off the power and call your NED representative.

When contacting us with a problem, please inform us of the status of the camera.

You can get the status by

(1) executing the “I” command.

The example of the camera status.

```
I
>OK
>Type=SU2025
>Ver. =1.3
>g0
>a4
>o0
>v0
>t0
>I
```

Revision History

Revision Number	Date	Changes
01	12 July. 2012	Initial release
02	10 Oct. 2012	Update the EU Harmonised Standards
03	28 Oct. 2013	Product Warranty, Responsivity, Offset value
04	16 Oct. 2018	Update Figure 4-6-2 Video Output Phase
05	27 May. 2019	Update Power Supply Voltage